

 

 

 

 



 



 



 










 
 







 



 

 

 

 



 



 









 







 

 

 

 

 





 

 



 

 

 



 

 





Original	Replacement	Original	Replacement
 Power	 Power	 Vol +	 Vol+
 Mute	 Mute / Dimmer	 MTS	 Info / Angle
 1	 1	 CH +	 CH+ / Page+
 2	 2	 Vol -	 Vol-
 3	 3	 Aspect	 Shift + Picture / Format
 4	 4	 CH -	 CH- / Page-
 5	 5	 Guide	 Guide / EPG / -/-
 6	 6	 Home	 Shift + Menu /
 7	 7	 Rec	 Rec / Rec Mode
 8	 8	 Menu	 Menu / Home
 9	 9	 Up	 Up
 List	 Smart / List	 Source	 AV / Input / RDS
 0	 0	 Left	 Left
 Recall	 Back / Return	 Enter	 OK
 P.Mode	 Picture / Format	 Right	 Right
 S.Mode	 Sound / Title	 Exit	 Exit / Cancel / Clear
 Sleep	 Sleep / Timer	 Down	 Down





Original	Replacement
 Display	 Display / Media
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 << / Index	 << / Tune-
 Play/Pause /	 Pause / Step / Freeze
 Play/Pause /	 Shift + Exit / Cancel / Clear
 Play/Pause /	 Play / Slow
 >> / TTX	 >> / Tune+
 >> / TTX	 Text / Goto
 I<< / SUB.PG	 I<< / Preset-
 >>I / Reveal	 >>I / Preset+
 Stop / Mix	 Stop / Hold
 CAP	 D.Menu / Top
 Subtitle	 Subtitle / EQ
 TV / Radio	 TV/Radio /

Original	Replacement
 FAV	 Fav / Marker / PC
 Size / Mouse	 Zoom / Size
 Hold / Refresh	 Shift + Stop /

