



Original	Replacement
 Power ON	 Power
 Power OFF	 Shift + Power
 Mute	 Mute / Dimmer
 AVR	 Eject / Surround
 DVD	 Shift + 2
 CD	 Shift + 3
 Tape	 Shift + 5
 VID 1 / VCR	 Shift + 1
 VID 2 / TV	 Guide / EPG / -/--
 VID 3 / CBL/SAT	 Fav / Marker / PC
 VID 4	 Shift + 4
 DIM	 Shift + Mute / Dimmer
 AM / FM	 TV/Radio /
 6/8 CH	 Shift + 8
 PR + / Sleep	 CH+ / Page+
 Test	 Text / Goto
 Input	 AV / Input / RDS

Original	Replacement
 Vol +	 Vol+
 PR - / Surr	 CH- / Page-
 Night	 Sleep / Timer
 Vol -	 Vol-
 CH	 Shift + CH+ /
 Up	 Up
 SPKR / Menu	 Menu / Home
 Left	 Left
 Set	 Setup / OPT /
 Right	 Right
 Digital	 D.Menu / Top
 Down	 Down
 Delay / Normal	 Back / Return
 1	 1
 2	 2
 3	 3
 4	 4





Original	Replacement
5	5
6	6
7	7
8	8
Tun-M	Shift + 6
9	9
0	0
MEM	Smart / List
Red / Tuning +	Red / Netflix / Search
Red / Tuning +	Shift + Red / Netflix / Search
Green / Direct	Green / APP / Repeat
Yellow / Clear	Yellow / YouTube / Repeat
Preset + / Blue	Blue / Prime Video / Random
Preset + / Blue	Shift + Blue / Prime / Prime
Tuning -	Shift + Vol-
OSD	Display / Media
RDS / D.Skip	Shift + AV / Input / RDS

Original	Replacement
Preset -	I<< / Preset-
Dolby	Sound / Title
DTS Surr.	Picture / Format
DTS Neo 6	Shift + D.Menu / Top Menu
Logic 7	Shift + 7
Stereo	Audio / Lang I/II
<<	<< / Tune-
Play / Play	Play / Slow
>>	>> / Tune+
Rec	Rec / Rec Mode
Stop	Stop / Hold

