



Original	Replacement
Power	Power
Mute	Mute
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Menu	Menu
Last	Back
TV / R	TV/R
Exit	Exit
Up / CH +	Ch +

Original	Replacement
Up / CH +	Up
Down / CH -	Ch -
Down / CH -	Down
Right / Vol +	Vol +
Right / Vol +	Right
Left / Vol -	Left
Left / Vol -	Vol -
OK	Ok
Sub-T.	Subt
Info	Info
Text	Text
Audio	Dual
EPG	Guide
Favor	Pre Ch
Red / I<<	I<<
Red / I<<	Red
Green / <<	<<





Original	Replacement	Original	Replacement
 Green / <<	 Green		
 Yellow / >>	 >>		
 Yellow / >>	 Yellow		
 Blue / >>I	 Blue		
 Blue / >>I	 >>I		
 USB	 Media		
 Rec / Goto	 Rec		
 Stop	 Stop		
 Play / Pause	 Pause		
 Play / Pause	 Play		

