



Original		Replacement		Original		Replacement	
	Power		Power		Vol +		Vol +
	TV / RAD		TV/R		Vol -		Vol -
	Ratio		Format		FAV		Pre Ch
	Input		AV		3D		3D
	AV Mode		Shift + AV		Mute		Mute
	1		1		P + / Page +		Ch +
	2		2		P - / Page -		Ch -
	3		3		Settings		Shift + Options
	4		4		Info		Info
	5		5		Q.Menu / 3D		Menu
	6		6		Up		Up
	7		7		Right		Right
	8		8		Down		Down
	9		9		Left		Left
	0		0		OK		Ok
	List		List		Back		Back
	Q.View		Media		Guide		Guide





Original		Replacement		Original	Replacement
	Exit		Exit		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Text		Text		
	T.Opt		Options		
	Subtitle		Subt		
	Stop		Stop		
	Play		Play		
	Pause		Pause		
	<<		<<		
	<<		I<<		
	>>		>>		
	>>		>>I		
	Simplink		Smart		
	AD		Shift + Subt		

