

 


 
 

 

 
 
 
 

 


 


 

 



 

 






 
 
 

 


 


 

 
 

 


Original	Replacement
 Standby - On	 Power
 DVD	 Smart
 VCR	 Media
 Open / Close	 Eject
 Title	 Info
 Input	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Return	 Back

Original	Replacement
 Display	 Shift + Info
 Thumbnail	 3D
 List / Disc Menu	 D. Menu
 List / Disc Menu	 List
 System Menu	 Menu
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK / Enter	 Ok
 Stop	 Stop
 Play	 Play
 << REW	 <<
 >> FWD	 >>
 Search	 TV/R
 I< Prev	 I<<
 >I Next	 >>I



 



 
 

 



 

 
 
 
 



 
 

 

 



 


 



 

 


 
 




 






 





 


Original		Replacement		Original		Replacement	
	Pause / Step		Pause				
	D. Dubbing		Dual				
	Timer		Shift + AV				
	Rec Mode		Shift + Rec				
	Rec		Rec				
	Chap. Add		Text				
	Marker		Pre Ch				
	Clear		Exit				
	Child Lock		Shift + Ok				
	Subtitle		Subt				
	Audio		Shift + Dual				
	Zoom		Shift + Eject				
	Angle		Format				
	Repeat		Shift + Text				
	Repeat A-B		Shift + TV/R				
	Shuffle		Sleep				
	Showview Video		Options				







Original	Replacement
 Standby - On	 Power
 DVD	 Smart
 VCR	 Media
 Mode	 D. Menu
 Open / Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Input	 AV
 Display	 Info

Original	Replacement
 System Menu	 Menu
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK / Enter	 Ok
 Stop	 Stop
 Play	 Play
 << REW	 <<
 >> FWD	 >>
 Pause / Step	 Pause
 Rec	 Rec
 Clear	 Exit
 Child Lock	 Shift + Ok

