







Original	Replacement
	Smart / List
	Text / Goto
	Display / Media
	Power
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Back / Return
	Fav / Marker / PC

Original	Replacement
	Subtitle / EQ
	Info / Angle
	Picture / Format
	Vol+
	Shift + CH+ /
	CH+ / Page+
	Vol-
	Shift + CH- /
	CH- / Page-
	Audio / Lang I/II
	Shift + Audio / Lang I/II
	Sound / Title
	Guide / EPG / -/-
	Up
	Left
	OK
	Right





Original	Replacement
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 <<	 << / Preset-
 >>	 >> / Preset+
 Timer	 Sleep / Timer
 Aspect	 Zoom / Size

Original	Replacement

