

 


 

 

 




 
 
 




 

 
 


 



 

 

 
 


 
 
 
 
 

 

 



 
 
 





 
 


 
 







Original		Replacement		Original		Replacement	
	Power		Power		Right / Vol +		Vol +
	SUB-T		Subt		Left / Vol -		Left
	Lang		Dual		Left / Vol -		Vol -
	Mute		Mute		OK		Ok
	EPG		Guide		FAV		Pre Ch
	Goto		Smart		TV / Radio		TV/R
	Page +		Shift + Ch +		Recall		Back
	Page -		Shift + Ch -		Info		Info
	TTX		Text		1		1
	Repeat		Shift + Text		2		2
	Menu		Menu		3		3
	Exit		Exit		4		4
	Up / CH +		Up		5		5
	Up / CH +		Ch +		6		6
	Down / CH -		Down		7		7
	Down / CH -		Ch -		8		8
	Right / Vol +		Right		9		9








 

 

 
 
 
 
 
 
 

 



 


 
 






 
 
 


 



 



 

 

 
 

 

 



 

 









Original		Replacement		Original		Replacement	
	0		0				
	<<		<<				
	>>		>>				
	<<		<<				
	>>		>>				
	Play		Play				
	Pause / Timeshift		Pause				
	Stop		Stop				
	Rec		Rec				
	Red / PVR		Red				
	Green / V-Format		Green				
	Green / V-Format		Format				
	Yellow / Aspect		Yellow				
	Yellow / Aspect		3D				
	Blue / Timer		Blue				






 


 
 


 




 




 
 
 





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	EPG		Guide
	Info		Info
	Audio		Dual
	Recall		Back
	Subtitle		Subt
	Menu		Menu
	Exit		Exit
	Up / CH +		Up
	Up / CH +		Ch +
	Down / CH -		Down
	Down / CH -		Ch -
	Right / Vol +		Right
	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -
	OK		Ok
	FAV		Pre Ch
	TV / Radio		TV/R
	Text		Text
	Goto		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	USB		Media
	Rec		Rec





Original	Replacement	Original	Replacement
 Stop	 Stop		
 Play / Pause	 Play		
 Play / Pause	 Pause		
 <<	 <<		
 >>	 >>		
 <<	 <<		
 >>	 >>		
 ---	 Shift + 1		
 ---	 Shift + 2		
 ---	 Shift + 3		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

