


Original	Replacement
 Power	 Power
 Mute	 Mute
 Menu	 Menu
 1 / Disc 1	 1
 2 / Disc 2	 2
 3 / Disc 3	 3
 4 / Disc 4	 4
 5 / Disc 5	 5
 6	 6
 7 / Angle	 7
 8	 8
 9 / Night DVD	 9
 0 / --	 0
 Aux 1 / SAT /	 AV
 Aux 2 / VCR	 Shift + AV
 Tuner	 Shift + TV/R
 TV	 TV/R

Original	Replacement
 DVD / CD	 Media
 Vol +	 Vol +
 Vol -	 Vol -
>>I button" data-bbox="507 282 540 315"/> >>I	 >>I
 I<<	 I<<
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK / Save	 Ok
 Return	 Back
 Sleep	 Sleep
 Play Mode	 Shift + Play
 Pause	 Pause
 Stop	 Stop
 Rec / Zoom	 Rec
 << REV	 <<

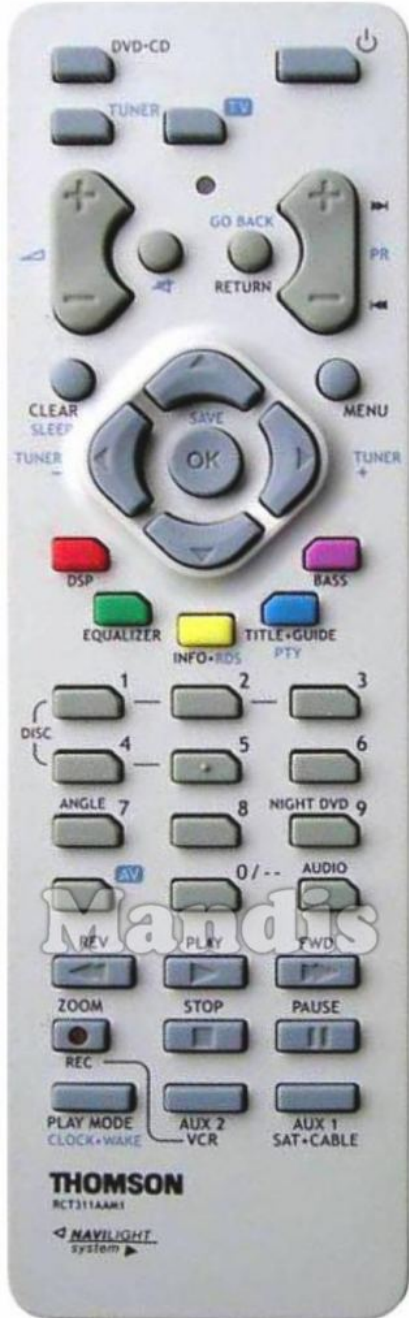



Original	Replacement	Original	Replacement
 Play	 Play		
 >> FWD	 >>		
 Audio	 Dual		
 PR +	 Ch +		
 PR -	 Ch -		
 Tuner -	 Shift + Left		
 Tuner +	 Shift + Right		
 Purple / Bass	 Pre Ch		
 Red / DSP	 Red		
 Green / Equalizer	 Green		
 Yellow / Info	 Yellow		
 Blue / Title/Guide	 Blue		
 Yellow / Info	 Info		
 Blue / Title/Guide	 Guide		

Original	Replacement	Original	Replacement

