 


 

 
 
 
 
 
 
 



 
 
 

 
 
 

 
 
 






 



 
 


 
 
 
 
 


 
 






 
 
 


 
 

 
 
 

 




Original		Replacement		Original		Replacement	
	Standby		Power		Back		Back
	AV		AV		Exit / Clear		Exit
	Mute		Mute		FAV / Program		Shift + Pre Ch
	16:9 / Angle		Format		EPG / Goto		Guide
	Zoom		Shift + Eject		Info / Display		Info
	Subt		Subt		Menu		Menu
	Audio		Dual		Up		Up
	1		1		Right		Right
	2		2		Down		Down
	3		3		Left		Left
	4		4		OK		Ok
	5		5		Vol -		Vol -
	6		6		Vol +		Vol +
	7		7		PR -		Ch -
	8		8		PR +		Ch +
	9		9		Red / Title		Red
	0		0		Green / Root		Green





Original	Replacement	Original	Replacement
 Yellow / Repeat	 Yellow		
 Blue / A-B	 Blue		
 TXT / I<<	 Text		
 TXT / I<<	 I<<		
 Sound / >>I	 Shift + Dual		
 Sound / >>I	 >>I		
 Picture / <<	 Shift + Format		
 Picture / <<	 <<		
 Swap / >>	 Pre Ch		
 Swap / >>	 >>		
 Eject	 Eject		
 Play / Pause	 Play		
 Play / Pause	 Pause		
 Stop	 Stop		
 Setup	 D. Menu		

