



| Original | Replacement |
|---|--|
|  Power |  Power |
|  TV |  Shift + TV/R |
|  VCR/AUX |  Shift + Options |
|  Sleep |  Sleep |
|  Tv/AV |  AV |
|  Tuner/Band |  TV/R |
|  DVD/CD |  Pre Ch |
|  FL |  Shift + Info |
|  Play Mode-Mix |  Shift + Play |
|  Repeat |  Text |
|  Position |  D. Menu |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |

| Original | Replacement |
|---|---|
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  ≥10 / -/- |  Guide |
|  Cancel |  Exit |
|  I<< Skip |  I<< |
|  Skip >>I |  >>I |
|  << Slow/Search |  << |
|  Slow/Search >> |  >> |
|  Stop |  Stop |
|  Pause |  Pause |
|  Play |  Play |
|  Top Menu/Direct Navigator |  Media |
|  Menu/Play List |  Menu |
|  Display |  Info |
|  Return |  Back |







 













 



 


 
 





| Original | Replacement |
|----------|-------------|
| | Up |
| | Down |
| | Right |
| | Left |
| | Ok |
| | Vol + |
| | Vol - |
| | Mute |
| | Options |
| | Subt |
| | List |
| | Red |
| | Green |
| | Yellow |
| | Smart |
| | Format |
| | Eject |

| Original | Replacement |
|----------|-------------|
| | Blue |
| | Dual |





| Original | Replacement | Original | Replacement |
|---|---|----------|-------------|
|  Power |  Power | | |
|  1 |  1 | | |
|  2 |  2 | | |
|  3 |  3 | | |
|  4 |  4 | | |
|  5 |  5 | | |
|  6 |  6 | | |
|  7 |  7 | | |
|  8 |  8 | | |
|  9 |  9 | | |
|  0 |  0 | | |
|  ≥10 / -/- |  GUIDE | | |
|  TV/AV |  AV | | |
|  CH+ |  CH + | | |
|  CH- |  CH - | | |
|  Tv Vol+ |  Vol + | | |
|  Tv Vol- |  Vol - | | |



