



 

 



 













 







 


 


























 

 

 


















Original	Replacement	Original	Replacement
 Power	 Power	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Guide	 Guide / EPG / -/-
 3	 3	 Down	 Down
 4	 4	 TV / Radio	 TV/Radio /
 5	 5	 Red	 Red / Netflix / Search
 6	 6	 Enregistrer	 Rec / Rec Mode
 7	 7	 Green	 Green / APP / Repeat
 8	 8	 FAV	 Fav / Marker / PC
 9	 9	 Yellow	 Yellow / YouTube / Repeat
 Info	 Info / Angle	 Stop	 Stop / Hold
 0	 0	 Blue	 Blue / Prime Video / Random
 Recall	 Back / Return	 Lecteur Media	 Display / Media
 Menu	 Menu / Home	 I<<	 I<< / Preset-
 Up	 Up	 Play	 Play / Slow
 Quitter	 Exit / Cancel / Clear	 Tune-	 << / Tune-





Original	Replacement
 Timer	 Sleep / Timer
 >>	 >>  / Preset+
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 TTX	 Text / Goto
 Audio	 Audio / Lang I/II
 S-Titres	 Subtitle / EQ
 Resolution	 Picture / Format

Original	Replacement

