




 


 

 
 
 
 

 

 
 
 
 






 
 
















 
 
 



 



 









 




Original	Replacement
 System Standby	 Power
 Muting	 Mute
 Menu	 Menu
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / 10	 0
 Display	 Info
 2 CH	 Red
 AFD	 Green
 Movie	 Yellow

Original	Replacement
 Music	 Blue
 Master Vol +	 Vol +
 Master Vol -	 Vol -
 >>I / Preset +	 >>I
 I<< / Preset -	 I<<
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Sleep	 Sleep
 FM Mode	 Smart
 Enter / Memory	 Media
 Auto Cal	 Options
 << / Tuning -	 <<
 >> / Tuning +	 >>
 D.Tuning	 Text









 

 



 

 








 


 







 


 





 



 
Original	Replacement
 Power	 Power
 Power AV	 +  Shift + Power
 Auto Cal	 Smart
 Sleep	 Sleep
 2CH	 Red
 A.F.D.	 Green
 Movie	 Yellow
 Music	 Blue
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Replacement
 0/10	 0
 -/-->10	 Guide
 Enter/Memory	 Pre Ch
 Menu	 Menu
 DVD Menu	 D. Menu
 Return/Exit	 Exit
 Tools	 Options
 Display	 Info
 D.Tuning/D.Skip	 Dual
 FM Mode	 AV
 Muting	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right











 
 
 

 




 
 

 







 
 

 







 

Original	Replacement
	 Left
	 Play
	 Pause
	 Stop
	 <</Tuning-
	 >>/Tuning+
	 >>I/Preset+
	 I<</Preset-
	 ←/Replay
	 →/Advance
	 Media
	 +  Shift + Media
	 +  Shift + Dual
	 +  Shift + Pre Ch
	 +  Shift + 1
	 +  Shift + 2
	 +  Shift + 3

Original	Replacement
	 +  Shift + 4
	 +  Shift + 5
	 +  Shift + 6
	 +  Shift + 7
	 +  Shift + 8
	 +  Shift + 9
	 +  Shift + 0
	 3D
	 +  Shift + Ok
	 +  Shift + Up
	 +  Shift + Down
	 +  Shift + Right
	 +  Shift + Left
	 +  Shift + Ch -
	 +  Shift + Ch +
	 Text
	+ Shift + AV





Original	Replacement
 Power	 Power
 Play	 Play
 Stop	 Stop
 Auto Cal	 Smart
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0
 >10* / -/-->10	 Guide
 OK	 Ok

Original	Replacement
 Enter/Memory	 Pre Ch
 Menu	 Menu
 Display	 Shift + Info
 Muting	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 FM Mode	 AV
 2CH	 Red
 A.F.D.	 Green
 Movie	 Yellow
 Music	 Blue
 Pause	 Pause
 >>/Tuning+	 >>





Original	Replacement
 Power	 Power
 Power AV	 +  Shift + Power
 Auto Cal	 Smart
 Sleep	 Sleep
 A.F.D.	 Green
 Movie	 Yellow
 Music	 Blue
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0

Original	Replacement
 -/-->10	 +  Shift + Guide
 Enter/Memory	 Pre Ch
 FM Mode	 AV
 Display	 +  Shift + Info
 Muting	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 <</Tuning-	 <<





Original	Replacement
TUNING + 	>>/Tuning+ 
TV CH+ PRESET + 	>>I/Presets+ 
TV CH- PRESET - 	I<</Presets- 
REPLAY 	CH - 
ADVANCE 	CH + 
VIDEO 2 	Media 
SA-CD/CD 	Shift + Media 
TV/AV/AVI/AV SYSTEM 	Info 
2CH 	Red 
D.TUNING 	Dual 
MEMORY ENTER 	Shift + Pre Ch 
1 SA-CD/CD 	Shift + 1 
2 SA-CD/CD 	Shift + 2 
3 SA-CD/CD 	Shift + 3 
4 SA-CD/CD 	Shift + 4 
5 SA-CD/CD 	Shift + 5 
6 SA-CD/CD 	Shift + 6 

Original	Replacement
7 SA-CD/CD 	Shift + 7 
8 SA-CD/CD 	Shift + 8 
9 SA-CD/CD 	Shift + 9 
0/10 SA-CD/CD 	Shift + 0 
>10 CLEAR 	Guide 
DISPLAY 	3D 
Stop SA-CD/CD 	Shift + Stop 
Pause 	Shift + Pause 
Play SA-CD/CD 	Shift + Ok 
TUNING - 	Shift + Left 
TUNING + 	Shift + Right 
TV CH- PRESET - 	Shift + Ch - 
TV CH+ PRESET + 	Shift + Ch + 

