


 







 




 






 







 


 


 

 


 
 



 


 
 









 

 




 







 




 


 
 

 

 

 
 

 

 




 







Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 1	 1	 Vol-	 Vol -
 2	 2	 Mute	 Mute
 3	 3	 UP/CH+	 Up
 4	 4	 Down/CH-	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 OK	 Ok
 8	 8	 Sys Menu	 Menu
 9	 9	 Display	 Shift + Info
 0	 0	 TV/TXT/Hold	 Media
 -/--	 Guide	 Cancel/Size	 3D
 Return	 Back	 Reveal	 Eject
 TV/AV	 AV	 Nicam/A2	 Options
 Timer	 Shift + AV	 Prog+	 Ch +
 Picture	 Format	 Prog-	 Ch -
 Sound	 Dual	 Subpage	 List

Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 1	 1	 Vol-	 Vol -
 2	 2	 Mute	 Mute
 3	 3	 UP/CH+	 Up
 4	 4	 Down/CH-	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 OK	 Ok
 8	 8	 Sys Menu	 Menu
 9	 9	 Display	 Shift + Info
 0	 0	 TV/TXT/Hold	 Media
 -/--	 Guide	 Cancel/Size	 3D
 Return	 Back	 Reveal	 Eject
 TV/AV	 AV	 Nicam/A2	 Options
 Timer	 Shift + AV	 Prog+	 Ch +
 Picture	 Format	 Prog-	 Ch -
 Sound	 Dual	 Subpage	 List



