








 

 


















 



 


 
 



 
 


 
 


 






 
 



 
 


 
 


 






 


Original	Replacement	Original	Replacement
 STB Power	 Power	 Right / Vol +	 Right
 Mute	 Mute	 Left / Vol -	 Left
 Audio	 Dual	 OK	 Ok
 1	 1	 Up / CH +	 Ch +
 2	 2	 Down / CH -	 Ch -
 3	 3	 Right / Vol +	 Vol +
 4	 4	 Left / Vol -	 Vol -
 5	 5	 Menu	 Menu
 6	 6	 EPG	 Guide
 7	 7	 FAV	 Pre Ch
 8	 8	 Exit	 Exit
 9	 9	 Subt	 Subt
 0	 0	 Info	 Info
 List	 List	 TTX	 Text
 Recall	 Back	 TV / Radio	 TV/R
 Up / CH +	 Up	 Page -	 Shift + Down
 Down / CH -	 Down	 Page +	 Shift + Up





Original	Replacement
 V-Format	 Format
 PVR	 Media
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Rec	 Rec
 <<	 <<
 >>	 >>
 I<<	 I<<
 >>I	 >>I
 TV Power	 Shift + Power
 TV Vol -	 Shift + Vol -
 TV Vol +	 Shift + Vol +

Original	Replacement
 TV CH -	 Shift + Ch -
 TV CH +	 Shift + Ch +
 TV OK	 Shift + Ok
 TV Source	 AV

