



Original	Replacement	Original	Replacement
On	Power	Input Sel. Tape	Shift + 5
Standby	Shift + Power	9 CD	9
1 CD	1	Input Sel. Tuner	Shift + 6
Input Sel. V1	Shift + 1	+10 / -- / --- CD	Fav / Marker / PC
2 CD	2	0 CD	0
Input Sel. V2	Shift + 0	Zone 2	Guide / EPG / -/-
3 CD	3	Dimmer	Shift + Mute / Dimmer
Input Sel. V3	Shift + 3	Menu	Menu / Home
4 CD	4	Sleep	Sleep / Timer
Input Sel. V4	Shift + 4	CH + / Disc +	CH+ / Page+
5 CD	5	Up	Up
Input Sel. Multi	Shift + Display / Media	Vol +	Vol+
6 CD	6	CH - / Disc -	CH- / Page-
Input Sel. DVD	Shift + 2	Left	Left
7 CD	7	Ener	OK
Input Sel. CD	Shift + 9	Right	Right
8 CD	8	Vol -	Vol-





Original	Replacement	Original	Replacement
 Return / Exit	 Back / Return	 Stereo	 Audio / Lang I/II
 Return / Exit	 Shift + Back / Return	 Repeat CD	 Green / APP / Repeat
 Down	 Down	 Pure A	 Sound / Title
 Setup	 Setup / OPT /	 Direct	 D.Menu / Top
 Display	 Display / Media	 Test Tone	 Zoom / Size
 Muting	 Mute / Dimmer	 CH Sel	 Smart / List
 I<< / CD	 I<< / Preset-	 Level -	 Shift + CH- /
 Play CD	 Play / Slow	 Level +	 Shift + CH+ /
 >>I / CD	 >>I / Preset+	 Open / Close CD	 Eject / Surround
 << / CD	 << / Tune-	 L. Night	 Shift + Sleep / Timer
 < DSP	 Shift + << /	 Cine FLTR	 Picture / Format
 Pause CD	 Pause / Step / Freeze		
 Stop CD	 Stop / Hold		
 >> / CD	 >> / Tune+		
 DSP >	 Shift + >> /		
 SURR	 Exit / Cancel / Clear		
 All ST	 Text / Goto		

