








 






Original	Replacement	Original	Replacement
Power	Power	Exit	Exit
Mute	Mute	Up/PR+	Up
1	1	Down/PR-	Down
2	2	Right	Right
3	3	Left	Left
4	4	OK/List	Ok
5	5	Vol+	Vol +
6	6	Vol-	Vol -
7	7	[+]	3D
8	8	UHF	HOME SMART
9	9	↑	+ CH
0	0	↓	CH -
Tv/Radio	SEARCH TV/R	FAV	FAV PRE-CH
←PR	RETURN BACK	PAL/NTSC	PICTURE FORMAT
EPG	GUIDE	Red	Red
Menu	TOP MENU MENU	Green	Green
Info	DISPLAY INFO	Yellow	Yellow





Original	Replacement	Original	Replacement
 Blue/Sound	 Blue		
 Audio	 Dual		
 TXT	 Text		
 [...]	 Subt		
 Pause	 Pause		
 Tv/AV	 AV		

Original	Replacement

