









 

 



 





 



 






 






 
 



 


 
 



 

 

 



 

 

 






Original	Replacement	Original	Replacement
 TV	TV	 TV/R	TV/R
 Power	Power	 Power	Power
 1	1	 1	1
 2	2	 2	2
 3	3	 3	3
 4	4	 4	4
 5	5	 5	5
 6	6	 6	6
 7	7	 7	7
 8	8	 8	8
 9	9	 9	9
 0	0	 0	0
 SAT TNT	SAT TNT	 HOME SMART	Smart
 HD	HD	 APP MEDIA	Media
 V +	V +	 + VOL	Vol +
 V -	V -	 VOL -	Vol -
 Chaines Preferees	Chaines Preferees	 FAV PRE-CH	Pre Ch
 Silence	Silence	 MUTE	Mute
 P +	P +	 + CH	Ch +
 P -	P -	 CH -	Ch -
 Up	Up	 Up	Up
 Left	Left	 Left	Left
 OK	OK	 OK	Ok
 Right	Right	 Right	Right
 Down	Down	 Down	Down
 Pilote	Pilote	 SETTINGS OPT	Options
 Menu	Menu	 TOP MENU MENU	Menu
 Guide	Guide	 GUIDE	Guide
 Retour	Retour	 RETURN BACK	Back
 Serv	Serv	 REPEAT TEXT	Text
 Sortie	Sortie	 CLEAR EXIT	Exit
 <<	<<	 <<	<<
 Play	Play	 PLAY MODE	Play
 >>	>>	 >>	>>



