





 



 















 



 

 

 











 





 
 
 
 


 
 



 









Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	TV		TV/Radio /		Source		AV / Input / RDS
	1		1		P -		CH- / Page-
	2		2		Info		Info / Angle
	3		3		Menu		Menu / Home
	4		4		Guide		Guide / EPG / -/-
	5		5		Tools		Setup / OPT /
	6		6		Up		Up
	7		7		Return		Shift + Back / Return
	8		8		Left		Left
	9		9		Enter		OK
	FAV CH		Fav / Marker / PC		Right		Right
	0		0		Internet		Smart / List
	PRE CH		Back / Return		Down		Down
	Vol+		Vol+		Exit		Exit / Cancel / Clear
	Mute		Mute / Dimmer		Red		Red / Netflix / Search
	P +		CH+ / Page+		Green		Green / APP / Repeat





Original	Replacement	Original	Replacement
	Yellow  Yellow / YouTube / Repeat		
	Blue  Blue / Prime Video / Random		
	TTX/MIX  Text / Goto		
	Media P  Display / Media		
	Content  D.Menu / Top		
	CH LIST  Shift + Smart / List		
	AD  Audio / Lang I/II		
	SUBT  Subtitle / EQ		
	<<  << / Tune-		
	Pause  Pause / Step / Freeze		
	>>  >> / Tune+		
	Rec  Rec / Rec Mode		
	Play  Play / Slow		
	Stop  Stop / Hold		

