


Original		Replacement		Original		Replacement	
	Power		Power		CH -		CH- / Page-
	TV / AV		AV / Input / RDS		Exit		Exit / Cancel / Clear
	TV / TXT		Text / Goto		Vol -		Vol-
	Cancel		Shift + Exit / Cancel / Clear		Up		Up
	Reveal		Display / Media		Left		Left
	DTV		Setup / OPT /		OK		OK
	Hold		Stop / Hold		Right		Right
	Size		Zoom / Size		Down		Down
	Subpage		Eject / Surround		1		1
	Index		D.Menu / Top		2		2
	Red		Red / Netflix / Search		3		3
	Green		Green / APP / Repeat		4		4
	Yellow		Yellow / YouTube / Repeat		5		5
	Blue		Blue / Prime Video / Random		6		6
	CH +		CH+ / Page+		7		7
	Menu		Menu / Home		8		8
	Vol +		Vol+		9		9

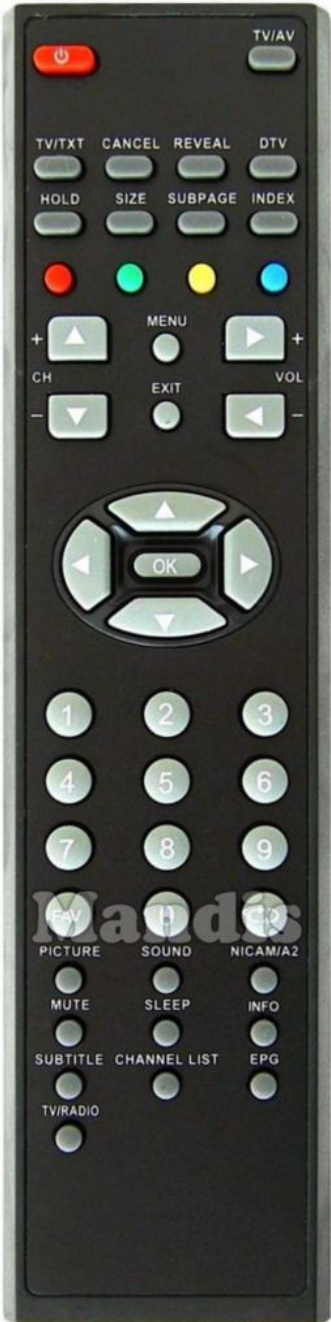



Original		Replacement		Original	Replacement
	FAV		Fav / Marker / PC		
	0		0		
	Recall		Back / Return		
	Picture		Picture / Format		
	Sound		Sound / Title		
	Nicam / A2		Audio / Lang I/II		
	Mute		Mute / Dimmer		
	Sleep		Sleep / Timer		
	Info		Info / Angle		
	Subtitle		Subtitle / EQ		
	Channel List		Smart / List		
	EPG		Guide / EPG / -/--		
	TV / Radio		TV/Radio /		

