



 

 

















 






















Original	Replacement	Original	Replacement
	Power		Power
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<< Search		<< / Tune-
	Search >>		>> / Tune+
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	Re-Master		Sound / Title
	Audio		Audio / Lang I/II
	Open/Close		Eject / Surround
	PIP		Picture / Format
	Select/Drive		D.Menu / Top
	Option		Setup / OPT /
	Cast/Vieta		Text / Goto
	AV Tv		AV / Input / RDS
	Function Menu		Menu / Home

Original	Replacement	Original	Replacement
	Up		Up
	Left/<II		Left
	OK		OK
	Right/II>		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Return		Back / Return
	Vol+ Tv		Vol+
	Top Menu/Direct Navigator		Smart / List
	CH+ Tv		CH+ / Page+
	Vol- Tv		Vol-
	Display		Display / Media
	CH- Tv		CH- / Page-
	1		1
	2		2
	3		3
	4		4





	Original	Replacement	Original	Replacement
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	0	 0		
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	Power Tv	 Shift + Power		
	Status	 Shift + Setup / OPT / Tools		
	Cancel	 Shift + Exit / Cancel / Clear		
	Vol+ Receiver	 Shift + Vol+		
	Pop-Up Menu	 Shift + Smart / List		
	Vol- Receiver	 Shift + Vol-		

