 




 
 
 
 

 

 
 

 


 
 
 

 
 
 
 
 





 
 




Original	Replacement
 Power	 Power
 Mute	 Mute
 FAV	 Pre Ch
 Subtitle	 Subt
 Info	 Info
 TTX	 Text
 Recall	 Back
 USB	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Replacement
 0	 0
 Menu	 Menu
 Exit	 Exit
 Up / CH +	 Up
 Up / CH +	 Ch +
 Down / CH -	 Down
 Down / CH -	 Ch -
 Right / Vol +	 Right
 Right / Vol +	 Vol +
 Left / Vol -	 Left
 Left / Vol -	 Vol -
 OK	 Ok
 Pg Dn	 Shift + Ch -
 Pg Up	 Shift + Ch +
 >>	 >>
 <<	 <<
 >>	 >>





Original		Replacement		Original	Replacement
	I<<		I<<		
	Play		Play		
	Pause		Pause		
	Stop		Stop		
	Audio		Dual		
	Repeat	 + 	Shift + Text		
	EPG		Guide		
	TV / Radio		TV/R		
	Sleep		Sleep		
	Red / Zoom		Red		
	Red / Zoom		Eject		
	Green / Aspect		Green		
	Green / Aspect	 + 	Shift + Format		
	Yellow / V-Format		Yellow		
	Yellow / V-Format		Format		
	Blue / Timer		Blue		
	Blue / Timer		Options		

