



Original	Replacement
 On/Standby	 Power
 Display	 Display / Media
 DVD / BD	 Shift + 2
 VCR / DVR	 Shift + 4
 CBL/SAT	 Shift + 0
 Game	 Shift + 9
 AUX	 Shift + 7
 TV / TAPE	 Shift + 5
 TV / TAPE	 Shift + 1
 TUNER	 Shift + 6
 PORT	 Shift + 8
 CD	 Shift + 3
 Muting	 Mute / Dimmer
 CH/Disc/Album +	 CH + / Page+
 Vol+	 Vol+
 CH/Disc/Album-	 CH - / Page-
 Vol-	 Vol-

Original	Replacement
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Setup	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Audio	 Audio / Lang I/II
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Movie Tv	 Red / Netflix / Search
 Music	 Green / APP / Repeat



 























 





 

 

 

 



 



 

 

 

 

 

 

 

 



 

 

 



Original	Replacement
Game	Yellow / YouTube / Repeat
Stereo	Blue / Prime Video / Random
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10/--/---10/Dimmer/D.Tun	Guide / EPG / --
0/11	0
CLR/Sleep/12	Fav / Marker / PC
CLR/Sleep/12	Sleep / Timer
CLR/Sleep/12	Exit / Cancel / Clear

Original	Replacement





Original	Replacement	Original	Replacement
 Power BD/DVD	 Power	 << BD/DVD	 << / Tune-
 DVD/BD	 Smart / List	 Play BD/DVD	 Play / Slow
 CBL/SAT	 Display / Media	 >> BD/DVD	 >> / Tune+
 Vol+ Receiver	 Vol+	 Pause BD/DVD	 Pause / Step / Freeze
 Vol- Receiver	 Vol-	 Stop BD/DVD	 Stop / Hold
 Top Menu	 D.Menu / Top	 Search BD/DVD	 Red / Netflix / Search
 Up BD/DVD	 Up	 Repeat BD/DVD	 Green / APP / Repeat
 Menu BD/DVD	 Menu / Home	 Random	 Blue / Prime Video / Random
 Left BD/DVD	 Left	 Play Mode	 Yellow / YouTube / Repeat
 Enter BD/DVD	 OK	 1 BD/DVD	 1
 Right BD/DVD	 Right	 2 BD/DVD	 2
 Setup BD/DVD	 Setup / OPT /	 3 BD/DVD	 3
 Down BD/DVD	 Down	 4 BD/DVD	 4
 Return BD/DVD	 Back / Return	 5 BD/DVD	 5
 Audio BD/DVD	 Audio / Lang I/II	 6 BD/DVD	 6
 I<< BD/DVD	 I<< / Preset-	 7 BD/DVD	 7
 >>I BD/DVD	 >>I / Preset+	 8 BD/DVD	 8





Original	Replacement
 9 BD/DVD	 9
 +10/--/--10	 Guide / EPG / --
 0/11 BD/DVD	 0
 CLR/12 BD/DVD	 Fav / Marker / PC
 CLR/12 BD/DVD	 Exit / Cancel / Clear
 Power CBL/SAT	 Shift + Power
 CH Disc/Album+ CBL/SAT	 Shift + CH+ /
 CH Disc/Album- CBL/SAT	 Shift + CH- /
 Guide CBL/SAT	 Shift + Guide / EPG / --
 Up CBL/SAT	 Shift + Up
 Menu/Prev CH CBL/SAT	 Shift + Menu /
 Left CBL/SAT	 Shift + Left
 Enter CBL/SAT	 Shift + OK
 Right CBL/SAT	 Shift + Right
 Setup CBL/SAT	 Shift + Setup / OPT / Tools
 Down CBL/SAT	 Shift + Down
 Return CBL/SAT	 Shift + Back / Return

Original	Replacement
 << CBL/SAT	 Shift + << /
 Play CBL/SAT	 Shift + Play /
 >> CBL/SAT	 Shift + >> /
 Pause CBL/SAT	 Shift + Pause / Step /
 Stop CBL/SAT	 Shift + Stop /
 Movie Tv/Search CBL/SAT	 Shift + Red / Netflix /
 Music/Repeat CBL/SAT	 Shift + Green / APP /
 Game/Random	 Shift + Yellow / YouTube /
 Stereo/Play Mode CBL/SAT	 Shift + Blue / Prime
 1 CBL/SAT	 Shift + 1
 2 CBL/SAT	 Shift + 2
 3 CBL/SAT	 Shift + 3
 4 CBL/SAT	 Shift + 4
 5 CBL/SAT	 Shift + 5
 6 CBL/SAT	 Shift + 6
 7 CBL/SAT	 Shift + 7
 8 CBL/SAT	 Shift + 8





Original	Replacement
<div style="background-color: black; color: white; padding: 2px;">9</div> 9 CBL/SAT	<div style="background-color: orange; border: 1px solid black; padding: 2px;">SHIFT</div> + <div style="background-color: black; color: white; padding: 2px;">9</div> Shift + 9
<div style="background-color: black; color: white; padding: 2px;">0</div> 0/11 CBL/SAT	<div style="background-color: orange; border: 1px solid black; padding: 2px;">SHIFT</div> + <div style="background-color: black; color: white; padding: 2px;">0</div> Shift + 0

Original	Replacement






Original	Replacement	Original	Replacement
Power CD	Power	Play CD	Play / Slow
CD	Smart / List	>> CD	>> / Tune+
CH/Disc+ CD	CH+ / Page+	Pause CD	Pause / Step / Freeze
Vol+ Receiver	Vol+	Stop CD	Stop / Hold
CH/Disc- CD	CH- / Page-	Search CD	Red / Netflix / Search
Vol- Receiver	Vol-	Repeat CD	Green / APP / Repeat
Up CD	Up	Random CD	Blue / Prime Video / Random
Left CD	Left	Play Mode CD	Yellow / YouTube / Repeat
Enter CD	OK	1 CD	1
Right CD	Right	2 CD	2
Setup CD	Setup / OPT /	3 CD	3
Down CD	Down	4 CD	4
Return CD	Back / Return	5 CD	5
Audio CD	Audio / Lang I/II	6 CD	6
I<< CD	I<< / Preset-	7 CD	7
>>I CD	>>I / Preset+	8 CD	8
<< CD	<< / Tune-	9 CD	9





Original	Replacement	Original	Replacement
 +10/--/--10/D.Tun/ Dimmer CD	 Guide / EPG / -/--		
 0/11 CD	 0		
 CLR/Sleep/12	 Fav / Marker / PC		



 

 



Original	Replacement	Original	Replacement
 Power Receiver Zone 2	 Power	 >> Zone 2	 >> / Tune+
 CH Disc/Album+ Zone 2	 CH+ / Page+	 Pause Zone 2	 Pause / Step / Freeze
 Vol+ Zone 2	 Vol+	 Stop Zone 2	 Stop / Hold
 CH Disc/Album- Zone 2	 CH- / Page-	 Movie Tv Zone	 Red / Netflix / Search
 Vol- Zone 2	 Vol-	 Music Zone 2	 Green / APP / Repeat
 Up Zone 2	 Up	 Game Zone 2	 Yellow / YouTube / Repeat
 Left Zone 2	 Left	 Stereo Zone 2	 Blue / Prime Video / Random
 Enter Zone 2	 OK	 1 Zone 2	 1
 Right Zone 2	 Right	 2 Zone 2	 2
 Setup Zone 2	 Setup / OPT /	 3 Zone 2	 3
 Down Zone 2	 Down	 4 Zone 2	 4
 Return Zone 2	 Back / Return	 5 Zone 2	 5
 Audio Zone 2	 Audio / Lang I/II	 6 Zone 2	 6
 I<< Zone 2	 I<< / Preset-	 7 Zone 2	 7
 >>I Zone 2	 >>I / Preset+	 8 Zone 2	 8
 << Zone 2	 << / Tune-	 9 Zone 2	 9
 Play Zone 2	 Play / Slow	 +10/--/--10/D.Tun/Dimmer Zone 2	 Guide / EPG / -/-







	Original	Replacement		Original	Replacement
	0/11 Zone 2	 0			
	CLR/Sleep/12	 Fav / Marker / PC			

