






 

 



















 



 



 



 



 
 
 


 
 



 

 







 

 




Original	Replacement	Original	Replacement
 Power	 Power	 Aspect	 Format
 Text / Display	 Text	 Exit	 Exit
 Call / Index	 Info	 Up / P+	 Up
 1	 1	 Up / P+	 Ch +
 2	 2	 Down / P-	 Down
 3	 3	 Down / P-	 Ch -
 4	 4	 Right / Vol +	 Right
 5	 5	 Right / Vol +	 Vol +
 6	 6	 Left / Vol -	 Left
 7	 7	 Left / Vol -	 Vol -
 8	 8	 OK	 Ok
 9	 9	 Red	 Red
 0	 0	 Green	 Green
 Recall	 Pre Ch	 Yellow	 Yellow
 Input	 AV	 Blue	 Blue
 Menu / DVD	 Menu	 I/II	 Dual
 → [] ←	 3D	 Audio	 Shift + Dual






 






 




 





 





 




Original	Replacement	Original	Replacement
 Mute	 Mute		
 Play / Reveal	 Smart		
 Stop / Hold	 Stop		
 Play / Reveal	 Play		
 << / Size	 <<		
 >> / [OK] / [X]	 >>		











Original		Replacement		Original	Replacement
	Power		Power		
	Menu DVD		Menu		
	Up		Up		
	Down		Down		
	Right		Right		
	Left		Left		
	OK		Ok		
	Pause		Pause		
	Play		Play		
	<<		<<		
	>>		>>		
	Open/Close		Eject		
	Stop		Stop		
	I<<		I<<		
	>>I		>>I		





Original	Replacement	Original	Replacement
	Power		Power
	Pause		Pause
	Play		Play
	<<		<<
	>>		>>
	Eject		Eject
	Stop		Stop
	<<		<<
	>>		>>

