 

 

 

 

 

 

 

 



 

 



 
 




 







Original	Replacement
 Sleep	 Sleep / Timer
 Standby AV	 Shift + Power
 System Standby	 Power
 Video1	 Shift + 4
 Video 2	 Shift + 1
 DVD	 Shift + 2
 MD/Tape	 Shift + 5
 CD	 Shift + 3
 Tuner	 Shift + 6
 Top Menu	 Shift + D.Menu / Top Menu
 1 Tuner	 1
 Up	 Up
 2 Tuner	 2
 DVD Menu	 D.Menu / Top
 3 Tuner	 3
 Left	 Left
 4 Tuner	 4

Original	Replacement
 Enter	 OK
 5 Tuner	 5
 Right	 Right
 6 Tuner	 6
 7 Tuner	 7
 Down	 Down
 8 Tuner	 8
 Recall	 Fav / Marker / PC
 9 Tuner	 9
 >10 Tuner/Shift/-/-	 Guide / EPG / -/-
 0 Tuner	 0
 Enter/D.Tuning/Return Tuner	 Back / Return
 I<</CH/Preset-	 I<< / Preset-
 I<</CH Preset-Tuner	 Shift + I<< / Preset-
 >>I/CH/Preset+	 >>I / Preset+
 >>I/CH Preset+ Tuner	 Shift + >>I / Preset+
 Tv/Video/ANT	 AV / Input / RDS





Original	Replacement
<<	<< / Tune-
>>	>> / Tune+
D.Skip/TV/VTR	TV/Radio /
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
2CH	Sound / Title
A.F.D.	Eject / Surround
Movie/Music	Audio / Lang I/II
Test Tone	Subtitle / EQ
Main Menu	Menu / Home
Multi CH	Picture / Format
< Menu	Shift + Left
Menu >	Shift + Right
Muting	Mute / Dimmer
-	CH- / Page-
+	CH+ / Page+

Original	Replacement
Master Vol+	Vol+
Tv Vol+	Shift + Vol+
Tv CH+	Shift + CH+ /
Master Vol-	Vol-
Tv Vol-	Shift + Vol-
Tv CH-	Shift + CH- /





Original	Replacement
 Standby	 Power
 Video 1	 Shift + 4
 Video 2	 Shift + 1
 DVD	 Shift + 2
 MD/Tape	 Shift + 5
 CD	 Shift + 3
 Tuner	 Shift + 6
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 >10/Shift/-/-	 Guide / EPG / -/-

Original	Replacement
 0	 0
 Enter/D.Tuning/Return	 Back / Return
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 D.Skip/TV/VTR	 TV/Radio /
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Muting	 Mute / Dimmer
 Master Vol+	 Vol+
 Master Vol-	 Vol-





Original	Replacement
Standby CD	Power
Standby Video	Shift + Power
Video 1	Smart / List
Video 2	Display / Media
DVD	Blue / Prime Video / Random
MD/Tape	Green / APP / Repeat
CD	Yellow / YouTube / Repeat
Tuner	Red / Netflix / Search
1 CD	1
1 Video 1	Shift + 1
2 CD	2
2 Video 1	Shift + 2
3 CD	3
3 Video 1	Shift + 3
4 CD	4
4 Video 1	Shift + 4
5 CD	5

Original	Replacement
5 Video 1	Shift + 5
6 CD	6
6 Video 1	Shift + 6
7 CD	7
7 Video 1	Shift + 7
8 CD	8
8 Video 1	Shift + 8
9 CD	9
9 Video 1	Shift + 9
>10/Shift/-/ CD	Guide / EPG / -/ -
>10/Shift/-/ Video 1	Shift + Guide / EPG / -/ -
0 CD	0
0 Video 1	Shift + 0
Enter/D.Tuning/Return CD	Back / Return
Enter/D.Tuning/Return Video 1	Shift + Back / Return
I<< CD	I<< / Preset-
I<< Video 1	Shift + I<< / Preset-





Original	Replacement
 >>I CD	 >>I / Preset+
 >>I Video 1	 +  Shift + >>I / Preset+
 <<< CD	 <<< / Tune-
 <<< Video 1	 +  Shift + <<< /
 >>> CD	 >>> / Tune+
 >>> Video 1	 +  Shift + >>> /
 D.Skip/TV/VTR CD	 TV/Radio /
 D.Skip/TV/VTR Video 1	 +  Shift + TV/Radio / Program
 Play CD	 Play / Slow
 Play Video 1	 +  Shift + Play /
 Pause CD	 Pause / Step / Freeze
 Pause Video 1	 +  Shift + Pause / Step /
 Stop CD	 Stop / Hold
 Stop Video 1	 +  Shift + Stop /
 Muting	 Mute / Dimmer
 Master Vol+	 Vol+
 Master Vol-	 Vol-

Original	Replacement





Original	Replacement
Standby	Power
Standby Video	Shift + Power
Video 1	Smart / List
Video 2	Display / Media
DVD	Blue / Prime Video / Random
MD/Tape	Green / APP / Repeat
CD	Yellow / YouTube / Repeat
Tuner	Red / Netflix / Search
1 MD/Tape	1
1 Video 2	Shift + 1
2 MD/Tape	2
2 Video 2	Shift + 2
3 MD/Tape	3
3 Video 2	Shift + 3
4 MD/Tape	4
4 Video 2	Shift + 4
5 MD/Tape	5

Original	Replacement
5 Video 2	Shift + 5
6 MD/Tape	6
6 Video 2	Shift + 6
7 MD/Tape	7
7 Video 2	Shift + 7
8 MD/Tape	8
8 Video 2	Shift + 8
9 MD/Tape	9
9 Video 2	Shift + 9
>10/Shift/-/- MD/Tape	Guide / EPG / -/-
>10/Shift/-/- Video 2	Shift + Guide / EPG / -/-
0 MD/Tape	0
0 Video 2	Shift + 0
Enter/D.Tuning/Return MD/Tape	Back / Return
Enter/D.Tuning/Return Video 2	Shift + Back / Return
I<< MD/Tape	I<< / Preset-
I<< Video 2	Shift + I<< / Preset-





Original	Replacement
>>  MD/Tape	>>  / Preset+
>>  Video 2	+  Shift + >>  / Preset+
<<< MD/Tape	<<< / Tune-
<<< Video 2	+  Shift + <<< /
>>> MD/Tape	>>> / Tune+
>>> Video 2	+  Shift + >>> /
D.Skip/TV/VTR MD/Tape	AV / Input / RDS
D.Skip/TV/VTR Video 2	+  Shift + AV / Input / RDS
Play MD/Tape	Play / Slow
Play Video 2	+  Shift + Play /
Pause MD/Tape	Pause / Step / Freeze
Pause Video 2	+  Shift + Pause / Step /
Stop MD/Tape	Stop / Hold
Stop Video 2	+  Shift + Stop /
Muting	Mute / Dimmer
Master Vol+	Vol+
Master Vol-	Vol-

Original	Replacement

