





 





 















 


 




 



 



 





 





 

 

 












Original		Replacement		Original		Replacement	
	Power		Power		Vol +		Vol+
	Mute		Mute / Dimmer		Audio		Audio / Lang I/II
	1		1		CH +		CH+ / Page+
	2		2		Vol -		Vol-
	3		3		Aspect		Shift + Picture / Format
	4		4		CH -		CH- / Page-
	5		5		EPG / Set		Guide / EPG / -/-
	6		6		Home		Shift + Menu / Home
	7		7		APP		Shift + Green / APP / Repeat
	8		8		Menu		Menu / Home
	9		9		Up		Up
	List		Smart / List		Source		AV / Input / RDS
	0		0		Left		Left
	Recall		Back / Return		Enter		OK
	Picture		Picture / Format		Right		Right
	Sound		Sound / Title		Exit		Exit / Cancel / Clear
	Sleep		Sleep / Timer		Down		Down





Original	Replacement	Original	Replacement
 Info	 Info / Angle	 Hold / Refresh	 +  Shift + Stop /
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 << / Index	 << / Tune-		
 Play/Pause /	 Play / Slow		
 >> / TTX	 Text / Goto		
 >> / TTX	 >> / Tune+		
 I<< / Sub.Pg	 I<< / Preset-		
 >>I / Reveal	 >>I / Preset+		
 Stop / Mix	 Stop / Hold		
 Capture	 Display / Media		
 Subtitle	 Subtitle / EQ		
 Freeze	 Pause / Step / Freeze		
 FAV	 Fav / Marker / PC		
 Size / Mouse	 Zoom / Size		

