



















































Original	Replacement	Original	Replacement
Power	 Power	Hold / Auto	 Shift + Stop /
Mute	 Mute / Dimmer	Hold / Auto	 D.Menu / Top
1	 1	Red	 Red / Netflix / Search
2	 2	Green	 Green / APP / Repeat
3	 3	Yellow	 Yellow / YouTube / Repeat
4	 4	Blue	 Blue / Prime Video / Random
5	 5	Vol +	 Vol+
6	 6	Vol -	 Vol-
7	 7	I - II	 Audio / Lang I/II
8	 8	Source	 AV / Input / RDS
9	 9	CH +	 CH+ / Page+
0	 0	Freeze	 Shift + Pause / Step /
Text	 Text / Goto	CH -	 CH- / Page-
Recall / S.Page	 Back / Return	Sleep	 Sleep / Timer
Index / PVR List	 Smart / List	Menu	 Menu / Home
Reveal / Rec	 Rec / Rec Mode	Exit	 Exit / Cancel / Clear
Zoom / T.Shift	 Zoom / Size	DTV / Radio	 TV/Radio /


































Original	Replacement	
Aspect	 Shift + Picture / Format	
Up		Up
Left		Left
OK		OK
Right		Right
Down		Down
P.Mode	 Picture / Format	
S.Mode	 Sound / Title	
Media	 Display / Media	
Info	 Info / Angle	
Subtitle	 Subtitle / EQ	
Play / Pause	 Play / Slow	
I<<	 I<< / Preset-	
Play / Pause	 Pause / Step / Freeze	
>>I	 >>I / Preset+	
Stop	 Stop / Hold	
<<	 << / Tune-	

Original	Replacement	
>>	 >> / Tune+	
Slow / FAV	 Fav / Marker / PC	
A-B / Fav -	 Shift + Yellow / YouTube /	
Repeat / Fav +	 Shift + Green / APP /	
Repeat / Fav +	 Shift + Up	
A-B / Fav -	 Shift + Down	





Original	Replacement	Original	Replacement
Power		Power	
Freeze		Pause / Step / Freeze	
Swap		Back / Return	
PIP		Eject / Surround	
I-II		Audio / Lang I/II	
FAV.CH		Fav / Marker / PC	
[≡]		Text / Goto	
Mute		Mute / Dimmer	
Sleep		Sleep / Timer	
P.Size		Zoom / Size	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	

Original	Replacement	Original	Replacement
8		8	
9		9	
0		0	
Vol+		Vol+	
Jump		Setup / OPT /	
ENT		Smart / List	
Vol-		Vol-	
Info		Info / Angle	
Source		AV / Input / RDS	
CH+		CH+ / Page+	
Ch-		CH- / Page-	
Exit		Exit / Cancel / Clear	
Menu		Menu / Home	
Up		Up	
Left		Left	
OK		OK	
Right		Right	





Original	Replacement	Original	Replacement
Down	 Down		
S.Mode	 Sound / Title		
P.Mode	 Picture / Format		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
[≡i]	 Display / Media		
[≡?]	 Play / Slow		
[≡↓]	 D.Menu / Top		
[≡□]	 Stop / Hold		

