




 


 


 









 


 



 










Original	Replacement	Original	Replacement
	Power		Power
	Info		Rec
	Search		Red
	Sources		Green
	Up		Yellow
	Down		Blue
	Right		Vol+
	Left		Vol-
	OK		Mute
	←		Netflix
	Home		Windows
	≡		Rakuten Tv
	<<		CH+
	Play		CH-
	>>		Exit/TV
	Stop		1
	Pause		2
			3





Original		Replacement		Original		Replacement	
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Text		Text				
	List/Tv Guide		Guide				

