

 



 



 





 

 

 

 

 

 



 

 








 






 

 





Original	Replacement	Original	Replacement
 Power	 Power	 PgUp/> />>	 CH+ / Page+
 Source	 AV / Input / RDS	 4/VGA	 4
 e	 Smart / List	 5/Component	 5
 Aspect/Ratio	 Picture / Format	 6/Video	 6
 Resync	 Setup / OPT /	 PgDn/S.Video	 CH- / Page-
 Hide	 TV/Radio /	 7/SD/USB A	 7
 Zoom	 Zoom / Size	 8/HDMI/DVI	 8
 Mute	 Mute / Dimmer	 9/LAN/WIFI	 9
 Freeze	 Pause / Step / Freeze	 0/USB-B	 0
 Left	 Left		
 Up	 Up		
 Right	 Right		
 Menu	 Menu / Home		
 Down	 Down		
 1/ </<<	 1		
 2/Enter/Play/Paus	 2		
 3/Back/Stop	 3		

