 




 

 
 
 
 
 


 


 


 

 

 




 

 
 


 
 
 
 


 








 








 

 
 
 








Original		Replacement		Original		Replacement	
	Power Receiver		Power		1 Receiver		1
	Display Receiver		Info		2 Receiver		2
	Enter Receiver		Ok		3 Receiver		3
	Up Receiver		Up		4 Receiver		4
	Down Receiver		Down		5 Receiver		5
	Right Receiver		Right		6 Receiver		6
	Left Receiver		Left		7 Receiver		7
	Return Receiver		Back		8 Receiver		8
	Setup Receiver		Options		9 Receiver		9
	Home/Audio		Smart		0/11 Receiver		0
	Play Receiver		Play		+10/--/--10/Dimmer/D.Tun Receiver		Guide
	I<< Receiver		I<<		CLR/Sleep/12 Receiver		Pre Ch
	>>I Receiver		>>I		Movie Tv/Search Receiver		Red
	<< Receiver		<<		Music/Repeat Receiver		Green
	>> Receiver		>>		Game/Random Receiver		Yellow
	Pause/Play reverse Receiver		Pause		THX/Mode		Blue
	Stop Receiver		Stop		Muting		Mute



 





Original	Replacement	Original	Replacement
 Vol+ Receiver	 Vol +	 Setup USB	 Shift + Options
 Vol- Receiver	 Vol -	 Play USB	 Shift + Play
 CH/Disc/Album+ Receiver	 Ch +	 << USB	 Shift + <<
 CH/Disc/Album- Receiver	 Ch -	 >> USB	 Shift + >>
 Menu USB	 Menu	 Pause USB	 Shift + Pause
 Top Menu USB	 Shift + Menu	 Stop USB	 Shift + Stop
 Mode USB	 Format	 >>I USB	 Shift + >>I
 Search USB	 TV/R	 I<< USB	 Shift + I<<
 Random USB	 Eject	 TV / CD	 Shift + 8
 Repeat USB	 Text	 TUNER	 Shift + 7
 Return USB	 Shift + Back	 PORT	 Shift + 9
 Right USB	 Shift + Right	 AUX	 Shift + 6
 Down USB	 Shift + Down	 VCR / DVR	 Shift + 2
 Enter USB	 Shift + Ok	 GAME	 Shift + 4
 Left USB	 Shift + Left	 PC	 Shift + 5
 Up USB	 Shift + Up	 CBL / SAT	 Shift + 3
 Display USB	 Shift + Info	 BD / DVD	 Shift + 1





 




 
 


 
 
 

 


 
 
 





 



 



 

 

 



 





 

 

 
 
 
 
 
 

 












Original	Replacement
 NET	 Shift + Guide
 USB	 Shift + 0

Original	Replacement








 


 

 
 
 
 
 

 





 



 

 

 








 
 


 


Original		Replacement		Original		Replacement	
	Power BD/DVD		Power		Stop BD/DVD		Stop
	Menu/Prev CH		Menu		Movie Tv/Search BD/DVD		Red
	Top Menu/Guide BD/DVD		Options		Music/Repeat		Green
	Setup BD/DVD		Smart		Game/Random		Yellow
	Return BD/DVD		Back		Stereo/Play Mode BD/DVD		Blue
	Audio/Home		Media		1 BD/DVD		1
	Enter BD/DVD		Ok		2 BD/DVD		2
	Up BD/DVD		Up		3 BD/DVD		3
	Down BD/DVD		Down		4 BD/DVD		4
	Right BD/DVD		Right		5 BD/DVD		5
	Left BD/DVD		Left		6 BD/DVD		6
	I<< BD/DVD		I<<		7 BD/DVD		7
	>>I BD/DVD		>>I		8 BD/DVD		8
	<< BD/DVD		<<		9 BD/DVD		9
	>> BD/DVD		>>		0/11 BD/DVD		0
	Play BD/DVD		Play		+10/-10/D.Tun/Dimmer BD/DVD		Guide
	Pause/Play rev. BD/DVD		Pause		CLR/Sleep/12		Pre Ch



BD/DVD





Original	Replacement	Original	Replacement
 CBL/SAT	 Text	 Stop CBL/SAT	 Shift + Stop
 Muting Receiver	 Mute	 << CBL/SAT	 Shift + Ch -
 Vol+ Receiver	 Vol +	 >> CBL/SAT	 Shift + Ch +
 Vol- Receiver	 Vol -	 Play CBL/SAT	 3D
 Power CBL/SAT	 Shift + Power	 Movie Tv/Search CBL/SAT	 Dual
 CH Disc/Album+ CBL/SAT	 Ch +	 Music/Repeat CBL/SAT	 Subt
 CH Disc/Album- CBL/SAT	 Ch -	 Game/Random	 AV
 Menu/Prev CH CBL/SAT	 Shift + Menu	 Stereo/Play Mode CBL/SAT	 Format
 Top Menu/Guide CBL/SAT	 Shift + Options	 1 CBL/SAT	 Shift + 1
 Return CBL/SAT	 Shift + Back	 2 CBL/SAT	 Shift + 2
 Setup CBL/SAT	 Shift + Smart	 3 CBL/SAT	 Shift + 3
 Up CBL/SAT	 Shift + Up	 4 CBL/SAT	 Shift + 4
 Enter CBL/SAT	 Shift + Ok	 5 CBL/SAT	 Shift + 5
 Down CBL/SAT	 Shift + Down	 6 CBL/SAT	 Shift + 6
 Right CBL/SAT	 Shift + Right	 7 CBL/SAT	 Shift + 7
 Left CBL/SAT	 Shift + Left	 8 CBL/SAT	 Shift + 8
 Pause/Play rev. CBL/SAT	 Shift + Pause	 9 CBL/SAT	 Shift + 9








 
 

 

 
 

 
 
 

 



 


 
 
 
 
 


 








 
 




 






Original	Replacement	Original	Replacement
0/11 CBL/SAT	SHIFT + 0		
DVD/BD	SEARCH TV/R		







Original	Replacement	Original	Replacement
 Power CD	 Power	 Stop CD	 Stop
 CH/Disc+ CD	 Ch +	 Movie Tv/Search	 Red
 CH/Disc- CD	 Ch -	 Music/Repeat	 Green
 Return CD	 Back	 Game/Random	 Yellow
 Setup CD	 Smart	 Stereo/Play Mode	 Blue
 Audio/Home CD	 Media	 1 CD	 1
 Up CD	 Up	 2 CD	 2
 Down CD	 Down	 3 CD	 3
 Right CD	 Right	 4 CD	 4
 Left CD	 Left	 5 CD	 5
 Enter CD	 Ok	 6 CD	 6
 I<< CD	 I<<	 7 CD	 7
 >>I CD	 >>I	 8 CD	 8
 << CD	 <<	 9 CD	 9
 >> CD	 >>	 0/11 CD	 0
 Play CD	 Play	 +10/--10/D.Tun/ Dimmer CD	 Guide
 Pause CD	 Pause	 CLR/Sleep/12	 Pre Ch



CD



Original	Replacement	Original	Replacement
Muting Receiver	Mute		
Vol+ Receiver	Vol +		
Vol- Receiver	Vol -		
TV/CD	TV/R		







Original	Replacement	Original	Replacement
Power Receiver Zone 2	Power	>> Zone 2	>>
Muting Receiver	Mute	<< Zone 2	<<
Vol+ Zone 2	Vol +	Pause Zone 2	Pause
Vol- Zone 2	Vol -	Stop Zone 2	Stop
CH Disc/Album+ Zone 2	Ch +	Movie Tv/Search Zone 2	Red
CH Disc/Album- Zone 2	Ch -	Music/Repeat	Green
Up Zone 2	Up	Game/Random	Yellow
Enter Zone 2	Ok	Stereo/Play Mode Zone 2	Blue
Down Zone 2	Down	1 Zone 2	1
Right Zone 2	Right	2 Zone 2	2
Left Zone 2	Left	3 Zone 2	3
Return Zone 2	Back	4 Zone 2	4
Setup Zone 2	Smart	5 Zone 2	5
Audio/Home Zone	Media	6 Zone 2	6
I<< Zone 2	I<<	7 Zone 2	7
>>I Zone 2	>>I	8 Zone 2	8
Play Zone 2	Play	9 Zone 2	9





Original		Replacement		Original		Replacement	
	0/11 Zone 2		0				
	+10/--/--10/D.Tun/ Dimmer Zone 2		Guide				
	CLR/Sleep/12		Pre Ch				

