







 












 

 

 

 










Original	Replacement
 Power	 Power
 Tv	 TV/R
 P.Mode	 Format
 S.Mode	 Dual
 Sleep	 Sleep
 Aspect	 3D
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide

Original	Replacement
 Recall	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Source	 AV
 Ch+	 Ch +
 Ch-	 Ch -
 MTS	 Media
 C.C	 Text
 Info/Display	 Info
 Menu	 Menu
 Return	 Back
 Ch.List	 List
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right





Original	Replacement	Original	Replacement
 Left	 Left		
 Enter	 Ok		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 V-Chip	 Options		
 Fav.Ch	 +  Shift + Pre Ch		
 Fav.+	 >>		
 Fav.-	 <<		
 Add/Erase	 +  Shift + Exit		
 Auto	 D. Menu		
 HDMI	 Smart		
 VGA	 Subt		
 COMP	 Eject		

