



 


 



 



 



 

 






 

 



 



 



 




















 

 
 

 
 


 
 

 
 
 
 


| Original   | Replacement   |
|--|---|
|  D.Menu       |  D.Menu / Top      |
|  Power        |  Power             |
|  Open / Close |  Eject / Surround  |
|  Info         |  Info / Angle      |
|  P.Mode       |  Picture / Format  |
|  S.Mode       |  Sound / Title     |
|  Sleep        |  Sleep / Timer     |
|  Audio I/II   |  Audio / Lang I/II |
|  Subtitle     |  Subtitle / EQ     |
|  CH. List     |  Smart / List      |
|  Screen      |  TV/Radio /       |
|  1          |  1               |
|  2          |  2               |
|  3          |  3               |
|  4          |  4               |
|  5          |  5               |
|  6          |  6               |

| Original   | Replacement   |
|--|---|
|  7      |  7                   |
|  8      |  8                   |
|  9      |  9                   |
|  Source |  AV / Input / RDS    |
|  0      |  0                   |
|  Q.View |  Shift + Menu /      |
|  Mute   |  Mute / Dimmer       |
|  Guide  |  Guide / EPG / -/-   |
|  Vol +  |  Vol+                |
|  P+     |  CH+ / Page+         |
|  Vol - |  Vol-               |
|  P -  |  CH- / Page-       |
|  Menu |  Menu / Home       |
|  FAV  |  Fav / Marker / PC |
|  Up   |  Up                |
|  Left |  Left              |
|  OK   |  OK                |





| Original  | Replacement   |
|---|---|
|  Right                 |  Right                                 |
|  Down                  |  Down                                  |
|  Exit                  |  Exit / Cancel / Clear                 |
|  Record                |  Rec / Rec Mode                        |
|  [X] / Repeat          |  Back / Return                         |
|  ► / Index             |  Play / Slow                           |
|  ■■ Pause              |  Pause / Step / Freeze                 |
|  ■ Stop                |  Stop / Hold                           |
|  Red / ◀◀ / REV        |  Shift + Red / Netflix / Search        |
|  Red / ◀◀ / REV      |  Red / Netflix / Search              |
|  Green / ▶▶ / FWD    |  Shift + Green / APP / Repeat        |
|  Green / ▶▶ / FWD    |  Green / APP / Repeat                |
|  Yellow / ◀◀◀ / Prev |  Shift + Yellow / YouTube / Repeat   |
|  Yellow / ◀◀◀ / Prev |  Yellow / YouTube / Repeat           |
|  Blue / ▶▶▶ / Next   |  Blue / Prime Video / Random         |
|  Blue / ▶▶▶ / Next   |  Shift + Blue / Prime Video / Random |
|  [≡] / Setup         |  Setup / OPT /                       |

| Original  | Replacement   |
|---|---|
|  [≡] / Setup             |  Shift + Setup / OPT / Tools |
|  [≡] / Title             |  Shift + Sound / Title       |
|  [...] / Search          |  Text / Goto                 |
|  [...] / Search          |  Shift + Text /              |
|  [□] / 10+               |  Shift + 9                   |
|  [□] / 10+               |  Shift + 0                   |
|  [?] / Program           |  Shift + Guide / EPG / -/-   |
|  [◆] / A-B               |  Shift + Fav / Marker / PC   |
|  ⊕ / Angle / Rec. List  |  Shift + TV/Radio / Program |
|  ⊕ / Angle / Rec. List |  Shift + Sleep / Timer     |
|  D.Call                |  Shift + D.Menu / Top Menu |

