



Original	Replacement	Original	Replacement
 Power	 Power	 Yellow / PMode	 Format
 Mute	 Mute	 Yellow / PMode	 Shift + Yellow
 AUTO	 Smart	 Blue / SMode	 Shift + Dual
 PIP	 Shift + Smart	 Blue / SMode	 Shift + Blue
 Exit	 Exit	 Up	 Up
 Go To / Text	 Text	 Left	 Left
 Audio I/II	 Dual	 Enter	 Ok
 Display	 Info	 Right	 Right
 Sleep	 Sleep	 Down	 Down
 P+	 Ch +	 1	 1
 P-	 Ch -	 2	 2
 V+	 Vol +	 3	 3
 V-	 Vol -	 4	 4
 Red / Input	 AV	 5	 5
 Red / Input	 Shift + Red	 6	 6
 Green / TV	 Menu	 7	 7
 Green / TV	 Shift + Green	 8	 8



Menu



Original	Replacement	Original	Replacement
 9	 9	 I<< / Subpage	 I<<
 0	 0	 >>I / Lang	 >>I
 -/-- / +10	 SHIFT +  Shift + Guide	 Stop / FAV -	 Stop
 Recall / Prog	 RETURN BACK Back	 Stop / FAV -	 SHIFT +  Shift + Left
 Red / D.Setup	 A Red	 << / FAV	 <<
 Red / D.Setup	 SETTINGS OPT Options	 << / FAV	 PRE-CH Pre Ch
 Green / A-B	 B Green	 >> / FAV+	 >>
 Yellow / Angle	 C Yellow	 >> / FAV+	 SHIFT +  Shift + Right
 Blue / Repeat	 D Blue	 Eject / EPG	 ZOOM ▲ Eject
 Blue / Repeat	 SHIFT +  Shift + Text	 Eject / EPG	 -/-- GUIDE Guide
 Subtitle	 AD SUBT Subt	 Media	 APP MEDIA Media
 Pause/Play / Hold	 PLAY MODE ▶ Play	 Recorder	 REC MODE ● Rec
 Pause/Play / Hold	    Pause	 CH.LIST	 DISC NAV LIST List
 Size	 ECO 3D 3D	 TV/RADIO	 SEARCH TV/R TV/R
 D.Menu / Mix	 E-MANUAL D.MENU D. Menu		
 D.Disp / Reveal	 SHIFT +  Shift + Info		
 Zoom / TXT Index	 SHIFT +  Shift + Eject		

