



Original	Replacement	Original	Replacement
	Power		Power
	DVD		Media
	iPod/USB		Smart
	FM/EXT-In		AV
	One touch play		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Cancel		Exit
	Vol+		Vol +
	Vol-		Vol -
	I<< Skip		I<<
	>>I Skip		>>I
	<< Slow/Search		<<
	Slow/Search >>		>>
	Stop		Stop
	Pause		Pause
	Play		Play
	Top Menu/Direct Navigator		Menu
	Start		Pre Ch
	Menu/Play List		D. Menu
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left





Original		Replacement		Original		Replacement	
	OK		Ok				
	Functions		List				
	[OIO]PLII		Dual				
	Play Mode/Repeat		Text				
	Level/Subwoofer/-CH Select		Info				
	FL Display-Sleep		Sleep				
	Setup/Auto SP		Options				
	Sound-W.S.		Subt				
	Muting		Mute				
	Power Tv		Shift + Power				
	Tv/AV Tv		Shift + AV				
	Vol+ Tv		Shift + Vol -				
	Vol- Tv		Shift + Vol +				

