



Original	Replacement	Original	Replacement
	Power		Power
	Sleep/A.Stby		Sleep
	Clock/Timer		AV
	Scan Mode		Green
	Display		Info
	Picture/Adjust		Format
	Dimmer		Smart
	Play/Pause		Play
	Play/Pause USB		Pause
	Play/Pause SD		Media
	Tuner		TV/R
	Audio In		Dual
	<</Slow-		<<
	>>/Slow+		>>
	I<<		I<<
	I<< Group/Title Skip		Ch -
	>>I		>>I
	Group/Title Skip >>I		Ch +
	Stop/PTY		Stop
	Repeat		Text
	Top Menu/PG		Shift + Menu
	Menu/PL		Menu
	Tuner/Play		3D
	Vol+		Vol +
	Vol-		Vol -
	Fade Muting		Mute
	Return		Shift + Pre Ch
	Return		Back
	On Screen		Shift + Info
	Set Up		Options
	Up		Up
	Down		Down
	Right		Right
	Enter/Set		Ok





Original	Replacement	Original	Replacement
Left	Left	9	9
Audio/MPX	Red	0	0
Subtitle	Subt	10	Guide
Zoom	Eject	+10	Pre Ch
Sound Mode	List	Angle	Shift + 5
Surround	Shift + Dual	Time Search	Shift + 6
C.Voice	Yellow	DVD Level	Shift + 7
S.Turbo II	Blue	Audio In Level	Shift + 8
HBS	Shift + Smart	Repeat A-B	Shift + Text
1	1	Resume	D. Menu
2	2	Cancel	Exit
3	3	File Type	Shift + Media
4	4		
5	5		
6	6		
7	7		
8	8		

