




 
 




 
 


 
 
 


 


 





 
 
 



 













 

 

 



 

 












Original	Replacement	Original	Replacement
	Power		Power
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/Radio		TV/R
	Recall		Pre Ch
	Subtitulo		Subt
	Audio		Dual
	Back		Back
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Guia		Guide
	P+		Ch +
	P-		Ch -
	Imagen		Format
	Sonido		Options
	Aspecto		3D
	Menu		Menu
	Entrada		AV
	Info		Info
	Salir		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left





Original	Replacement
OK	Ok
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
<</[≡i]	<<
Play	Play
Pause/[≡♦]	Pause
>>/[≡?]	>>
<</[≡o]	<<
Stop/[≡+]	Stop
>> /[≡x]	>>
Rec	Rec
[/≡]	Text
FAV	+ Shift + Pre Ch
Home	Smart
Mouse	Eject

Original	Replacement
USB	Media

