



















 



 

 



 



 





 












 
 


 
 
 
 
 
 
 











 






Original	Replacement	Original	Replacement
 Power	 Power	 Up / CH +	 Ch +
 Mute	 Mute	 Down / CH -	 Down
 1	 1	 Down / CH -	 Ch -
 2	 2	 Right / Vol +	 Right
 3	 3	 Right / Vol +	 Vol +
 4	 4	 Left / Vol -	 Left
 5	 5	 Left / Vol -	 Vol -
 6	 6	 OK	 Ok
 7	 7	 SUB-T	 Subt
 8	 8	 Info	 Info
 9	 9	 Text / USB	 Text
 0	 0	 Audio	 Dual
 Menu	 Menu	 EPG	 Guide
 Last	 Back	 Favor	 Pre Ch
 TV / R	 TV/R	 Red / I<<<	 Red
 Exit	 Exit	 Red / I<<<	 I<<<
 Up / CH +	 Up	 Green / I<<<	 Green





Original	Replacement	Original	Replacement
 Green / ◀◀	 <<		
 Yellow / ▶▶	 Yellow		
 Yellow / ▶▶	 >>		
 Blue / ▶▶■	 Blue		
 Blue / ▶▶■	 >>		
 PVR	 Smart		
 •	 Rec		
 ■	 Stop		
 ▶ /	 Play		
 ▶ /	 Pause		

