

**Original**

	Power		Power
	CH/Level Up		Ch +
	CH/Level Down		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Marker		Media
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Setup		Options
	Menu		Menu
	Display / Sleep		Info
	Display / Sleep		Sleep
	Return/Dimmer		Back

**Replacement**
**Original**

	Stop		Stop
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	6CH Dir		3D
	CH Sel		TV/R

**Replacement**

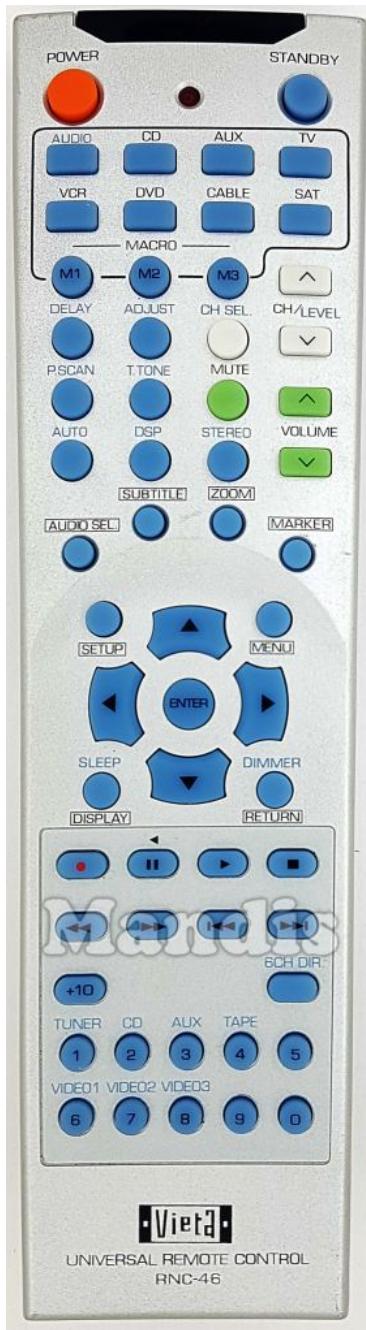


**Original**

	Original	Replacement
ADJUST	Adjust	DISC NAV LIST
DELAY	Delay	CLEAR EXIT
PSCAN	P.Scan	E-MANUAL D.MENU
T.TONE	T.Tone	REPEAT TEXT
AUTO	Auto	AO SUBT
DSP	DSP	TIMER AV
STEREO	Stereo	SOUND DUAL
CD	CD	B Green
AUDIO	AUDIO	A Red
AUX	AUX	C Yellow
TV	TV	D Blue
VCR	VCR	SHIFT + A Shift + Red
SAT	SAT	SHIFT + D Shift + Blue
CABLE	CABLE	SHIFT + C Shift + Yellow
DVD	DVD	SHIFT + B Shift + Green
POWER	AUX Power /	SHIFT + Power
PSCAN	AUX P.Scan	SHIFT + HOME SMART

**Original**

.	AUX Rec	SHIFT + REC MODE Shift + Rec
■	AUX Pause	SHIFT + II Shift + Pause
▶	AUX Play	SHIFT + PLAY MODE Shift + Play
■	AUX Stop	SHIFT + ■ Shift + Stop
◀◀	AUX <<	SHIFT + ◀◀ Shift + <<
▶▶	AUX >>	SHIFT + ▶▶ Shift + >>
▶▶▶	AUX >>I	SHIFT + ▶▶▶ Shift + >>I
◀◀◀	AUX I<<	SHIFT + ◀◀◀ Shift + I<<

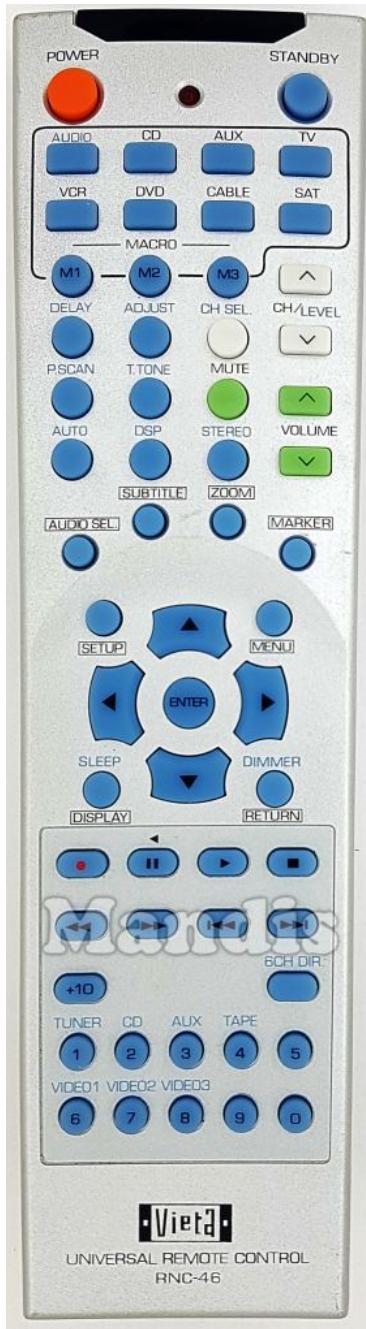**Replacement**




**Original**

AUDIO	<b>A</b>	Red
CD	<b>B</b>	Green
AUX	<b>C</b>	Yellow
TV	<b>D</b>	Blue
VCR	<b>SHIFT</b> + <b>A</b>	Shift + Red
DVD	<b>SHIFT</b> + <b>B</b>	Shift + Green
CABLE	<b>SHIFT</b> + <b>C</b>	Shift + Yellow
SAT	<b>SHIFT</b> + <b>D</b>	Shift + Blue
POWER	<b>POWER</b>	Power
TV CH/Level +	<b>CH</b> <b>+</b>	Ch +
TV CH/Level -	<b>CH</b> <b>-</b>	Ch -
TV CH Sel.	<b>APP</b> <b>MEDIA</b>	Media
TV Mute	<b>MUTE</b>	Mute
TV Volume +	<b>+ VOL</b>	Vol +
TV Volume -	<b>VOL</b> <b>-</b>	Vol -
TV 1	<b>1</b>	1
TV 2	<b>2</b>	2

**Replacement**
**Original**

AUX	<b>3</b>	3
TAPE	<b>4</b>	4
	<b>5</b>	5
VIDEO1	<b>6</b>	6
VIDEO2	<b>7</b>	7
VIDEO3	<b>8</b>	8
	<b>9</b>	9
	<b>0</b>	0
POWER	<b>POWER</b>	Shift + Power
CH/LEVEL	<b>CH</b> <b>+</b>	Shift + Ch +
CH/LEVEL	<b>CH</b> <b>-</b>	Shift + Ch -
CH SEL.	<b>APP</b> <b>MEDIA</b>	Shift + Smart
MUTE	<b>MUTE</b>	Shift + Mute
CH/LEVEL	<b>SHIFT</b> + <b>+</b> <b>VOL</b>	Shift + Vol +
VOLUME	<b>SHIFT</b> + <b>VOL</b> <b>-</b>	Shift + Vol -
TUNER	<b>SHIFT</b> + <b>1</b>	Shift + 1
CD	<b>SHIFT</b> + <b>2</b>	Shift + 2

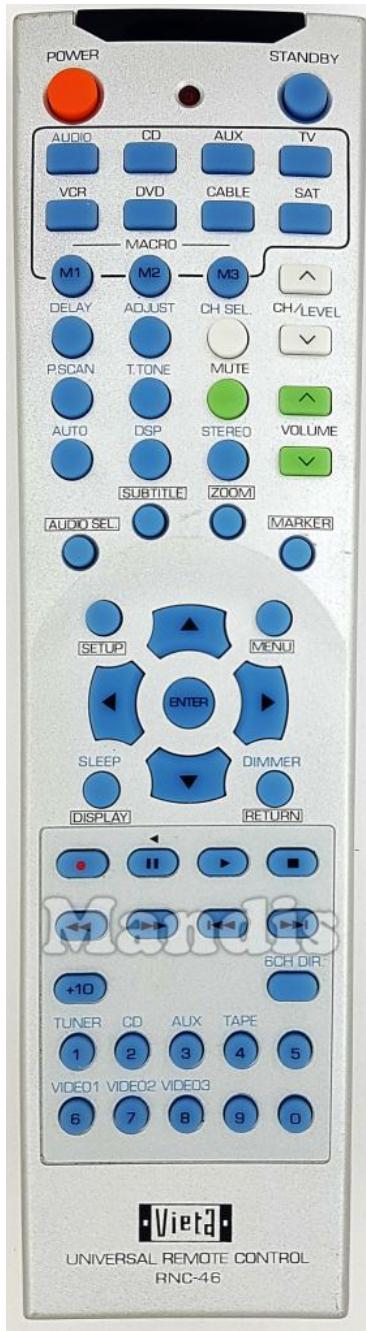**Replacement**


**Original**

	AUDIO		Red
	CD		Green
	AUX		Yellow
	TV		Blue
	VCR	+	Shift + Red
	DVD	+	Shift + Green
	SAT	+	Shift + Blue
	CABLE	+	Shift + Yellow
	DVD Power		Power
	DVD P.Scan		Smart
	DVD T.Tone		Options
	DVD Audio Sel.		Dual
	DVD Subtitle		Subt
	DVD Zoom		3D
	DVD Marker		Pre Ch
	DVD Menu		Menu
	DVD Up		Up

**Replacement**
**Original**

	DVD Left		Left
	DVD Enter		Ok
	DVD Right		Right
	DVD Down		Down
	DVD Display		Info
	DVD Pause		Pause
	DVD Play		Play
	DVD Stop		Stop
	DVD <<		<<
	DVD >>		>>
	DVD I<<		I<<
	DVD >>I		>>I
	DVD 1		1
	DVD 2		2
	DVD 3		3
	DVD 4		4
	DVD 5		5

**Replacement**



**Original**

	DVD 6	<b>6</b>	6
VIDEO01	DVD 7	<b>7</b>	7
VIDEO02	DVD 8	<b>8</b>	8
VIDEO03	DVD 9	<b>9</b>	9
	DVD 0	<b>0</b>	0
POWER	SAT Power	<b>SHIFT</b> +	Shift + Power
CH/LEVEL	SAT CH/Level +	<b>SHIFT</b> +	Shift + Ch +
CH/LEVEL	SAT CH/Level -	<b>SHIFT</b> +	Shift + Ch -
CH SEL.	SAT CH Sel.	<b>SHIFT</b> +	Shift + Media
MUTE	SAT Mute	<b>SHIFT</b> +	Shift + Mute
VOLUME	SAT Volume +	<b>SHIFT</b> +	Shift + Vol +
VOLUME	SAT Volume -	<b>SHIFT</b> +	Shift + Vol -
TUNER	SAT 1	<b>SHIFT</b> +	Shift + 1
CD	SAT 2	<b>SHIFT</b> +	Shift + 2
AUX	SAT 3	<b>SHIFT</b> +	Shift + 3
TAPE	SAT 4	<b>SHIFT</b> +	Shift + 4
	SAT 5	<b>SHIFT</b> +	Shift + 5

**Replacement**
**Original**

VIDEO01	SAT 6	<b>SHIFT</b> +	Shift + 6
VIDEO02	SAT 7	<b>SHIFT</b> +	Shift + 7
VIDEO03	SAT 8	<b>SHIFT</b> +	Shift + 8
	SAT 9	<b>SHIFT</b> +	Shift + 9
	SAT 0	<b>SHIFT</b> +	Shift + 0

**Replacement**




**Original      Replacement**

	AUDIO		Red
	CD		Green
	AUX		Yellow
	TV		Blue
	VCR	+	Shift + Red
	SAT	+	Shift + Blue
	CABLE	+	Shift + Yellow
	DVD	+	Shift + Green
	CD P.Scan		Smart
	CD Pause		Pause
	CD Play		Play
	CD Stop		Stop
	CD I<<		I<<
	CD >>I		>>I
	CD 1		1
	CD 2		2
	CD 3		3

**Original      Replacement**

	CD 4		4
	CD 5		5
	CD 6		6
	CD 7		7
	CD 8		8
	CD 9		9
	CD 0		0
	VCR Power	+	Shift + Power
	VCR CH Sel.	+	Shift + Media
	VCR Rec	+	Shift + Rec
	VCR Play	+	Shift + Play
	VCR Mute	+	Shift + Mute
	VCR >>	+	Shift + >>
	VCR <<	+	Shift + <<
	VCR Volume -	+	Shift + Vol -
	VCR Volume +	+	Shift + Vol +
	VCR CH/Level +	+	Shift + Ch +



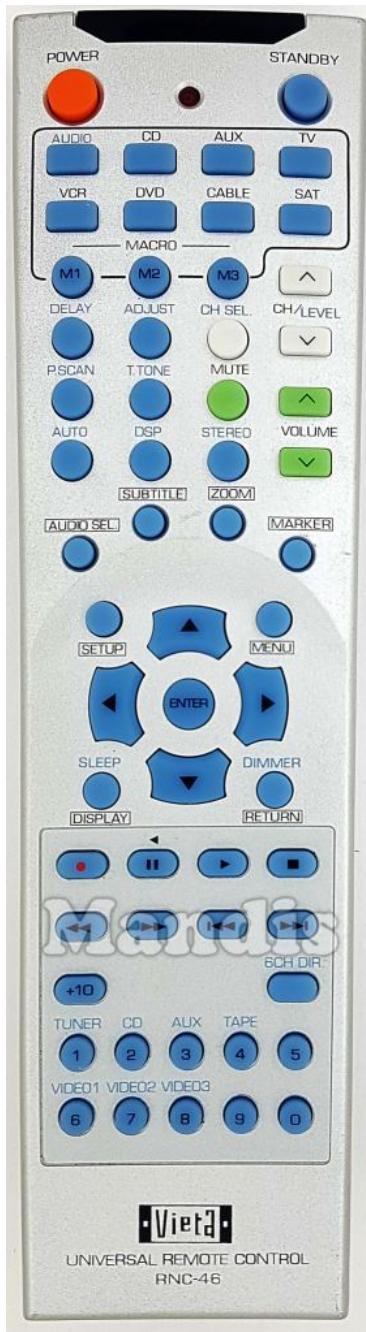

Original		Replacement	
 CH/LEVEL	VCR CH/Level -	 + 	Shift + Ch -
 P.SCAN	VCR P.Scan	 +  SMART	Shift + Smart
 II	VCR Pause	 + 	Shift + Pause
 ■	VCR Stop	 + 	Shift + Stop
 TUNER 1	VCR 1	 + 	Shift + 1
 CD 2	VCR 2	 + 	Shift + 2
 AUX 3	VCR 3	 + 	Shift + 3
 TAPE 4	VCR 4	 + 	Shift + 4
 5	VCR 5	 + 	Shift + 5
 VIDEO1 6	VCR 6	 + 	Shift + 6
 VIDEO2 7	VCR 7	 + 	Shift + 7
 VIDEO3 8	VCR 8	 + 	Shift + 8
 9	VCR 9	 + 	Shift + 9
 0	VCR 0	 + 	Shift + 0

