












 





 
 

 


 















 





 

 

 





 
 













Original	Replacement	Original	Replacement
 Standby/on	 Power	 Stop	 Stop / Hold
 DVD/CD	 Shift + 2	 >>	 >> / Preset+
 DVD/CD	 Shift + 3	 DVD Menu	 D.Menu / Top
 DVD/CD	 Red / Netflix / Search	 Up/Tune+	 Up
 Tuner/FM/AM	 Shift + 6	 Up/Tune+	 Shift + >> /
 Tuner/FM/AM	 Green / APP / Repeat	 Return	 Back / Return
 TV	 Shift + 1	 Left/ST-	 Left
 TV	 Yellow / YouTube / Repeat	 Enter	 OK
 Line/L1/L2	 Shift + 7	 Right/ST+	 Right
 Line/L1/L2	 Blue / Prime Video / Random	 Mute	 Mute / Dimmer
 Front Surround	 Shift + Up	 Down/Tune-	 Shift + << /
 Pause	 Pause / Step / Freeze	 Down/Tune-	 Down
 Open/Close	 Eject / Surround	 Sound	 Sound / Title
 <<<	 <<< / Tune-	 Volume Master-	 Vol-
 Play	 Play / Slow	 Volume	 Vol+
 >>>	 >>> / Tune+	 CH+ Tv	 Shift + CH+ /
 I<<<	 I<<< / Preset-	 Power Tv	 Shift + Power





Original		Replacement		Original		Replacement	
	Vol+ Tv		Shift + Vol+		Zoom		Zoom / Size
	CH- Tv		Shift + CH- /		2		2
	Input Tv		Shift + AV / Input / RDS		Top Menu		Shift + D.Menu / Top Menu
	Vol- Tv		Shift + Vol-		3		3
	Surround		Shift + Eject / Surround		Home Menu		Menu / Home
	Bass Mode		Shift + Right		4		4
	Advanced		Smart / List		System Setup		Setup / OPT /
	Dialogue		Shift + Audio / Lang I/II		5		5
	Virtual SB		Shift + Left		Test Tone		Text / Goto
	CH Level		Shift + Down		6		6
	Audio		Audio / Lang I/II		Quiet/Midnight		Sleep / Timer
	Program		TV/Radio /		7		7
	Subtitle		Subtitle / EQ		Dimmer		Shift + Mute / Dimmer
	Repeat		Shift + Green / APP /		8		8
	Angle		Info / Angle		Display		Display / Media
	Random		Shift + Blue / Prime		9		9
	1		1		Timer Clock		Shift + Sleep / Timer





Original	Replacement
CLR	Exit / Cancel / Clear
SR+	Picture / Format
0	0
Folder-	CH- / Page-
Enter	Guide / EPG / -/--
Folder+	CH+ / Page+
Room Setup	Shift + Setup / OPT / Tools

Original	Replacement

