
 





 


 



 





 

 



 

 

 

 












Original		Replacement		Original		Replacement	
	Power		Power		Down		Down
	Mute		Mute		PMode		Format
	Exit		Exit		SMode		Shift + Dual
	Goto / Text		Text		1		1
	Audio / I/II		Dual		2		2
	Display		Info		3		3
	Sleep		Sleep		4		4
	P-		Ch -		5		5
	P+		Ch +		6		6
	V-		Vol -		7		7
	V+		Vol +		8		8
	Source		AV		9		9
	TV Menu		Menu		0		0
	Up		Up		-/-- / +10		Shift + Guide
	Left		Left		Recall / Prog		Back
	Enter		Ok		Red / D.Setup		Red
	Right		Right		Red / D.Setup		Options





Original		Replacement		Original		Replacement	
	Green / A-B		Green		<< / FAV		Pre Ch
	Yellow / Angle		Yellow		>> / FAV+		>>
	Blue / Repeat		Blue		>> / FAV+	 + 	Shift + Right
	Blue / Repeat	 + 	Shift + Text		Eject / EPG		Guide
	Subtitle		Subt		Eject / EPG		Eject
	Pause/Play / Hold		Play		USB / SD		Media
	Pause/Play / Hold		Pause		Recorder		Rec
	Size		3D		CH List		List
	Reveal / D.Disp	 + 	Shift + Info		TV / Radio		TV/R
	D.Menu / Mix		D. Menu				
	Zoom / TXT Index	 + 	Shift + Eject				
	I<< / Subpage		I<<				
	>>I / Lang		>>I				
	>>I / Lang		Smart				
	Stop / FAV-		Stop				
	Stop / FAV-	 + 	Shift + Left				
	<< / FAV		<<				

