



Original	Replacement	Original	Replacement
DVD Power	Power	<<	<<
1	1	>>	>>
2	2	Stop	Stop
3	3	Play / Pause	Play
4	4	Play / Pause	Pause
5	5	I<<	I<<
6	6	>>I	>>I
7	7	Return	Back
8	8	Step	Shift + Pause
9	9	Clear	Shift + Exit
0	0	Top Menu	Shift + Menu
Open / Close	Exit	Top Menu	D. Menu
Setup	Options	Display	Info
Zoom	Eject	Menu	Menu
3D Sound	3D	Up	Up
Bookmark	Pre Ch	Left	Left
Volume Con.	Guide	Enter	Ok



