




 





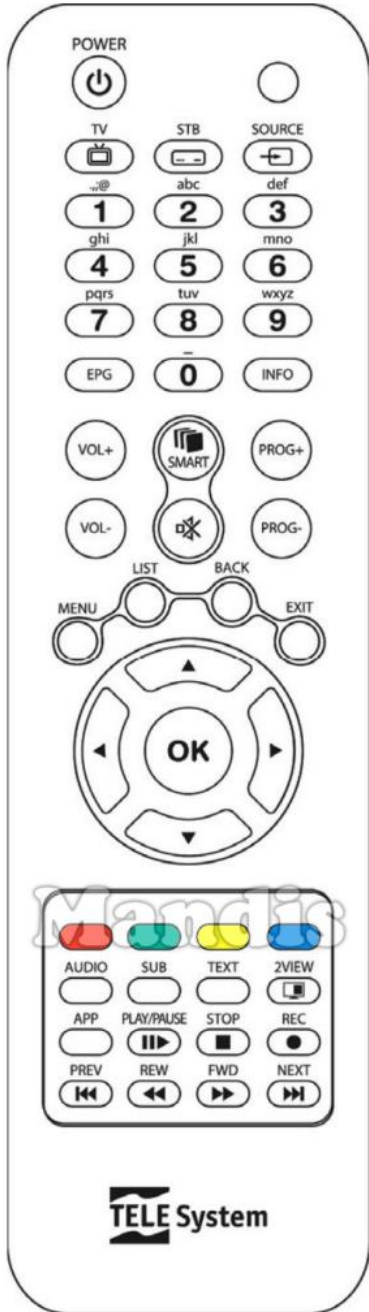


Original	Replacement	Original	Replacement
 Power	 Power	 Prog+	 Ch +
 1	 1	 Prog-	 Ch -
 2	 2	 Menu	 Menu
 3	 3	 List	 List
 4	 4	 Back	 Back
 5	 5	 Exit	 Exit
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 OK	 Ok
 9	 9	 Right	 Right
 0	 0	 Down	 Down
 EPG	 Guide	 Red	 Red
 Info	 Info	 Green	 Green
 Vol+	 Vol +	 Yellow	 Yellow
 Vol-	 Vol -	 Blue	 Blue
 Smart	 Smart	 Audio	 Dual
 Mute	 Mute	 Sub	 Subt

 TV	 DVD	 SAT	 AUX
 PLAY MODE	 II	 ■	 ●
 DISC NAV	 <<<	 >>>	 >>>
 LIST	 DUAL	 SUBT	 OPT
 PROG	 SEARCH	 PICTURE	 ECO
 SLEEP	 TV/R	 FORMAT	 3D
 E-MANUAL	 REPEAT	 ZOOM	 TIMER
 D.MENU	 TEXT	 ▲	 AV
 TOP MENU	 ▲	 OK	 INFO
 CLEAR	 EXIT	 RETURN	 BACK
 VOL+	 HOME	 SMART	 CH+
 VOL-	 APP	 MEDIA	 CH-
 1	 2	 3	
 4	 5	 6	
 7	 8	 9	
 FAV	 GUIDE	 0	 PRE-CH
 A	 B	 C	 D
			
<a href="http://www.mandis.tv">www.mandis.tv</a>			





Original		Replacement		Original		Replacement	
	Text		Text				
	2View		TV/R				
	APP		Media				
	Play / Pause		Play				
	Play / Pause		Pause				
	Stop		Stop				
	Rec		Rec				
	I<< PREV		I<<				
	>>I NEXT		>>I				
	<< REW		<<				
	>> FWD		>>				

