









Original	Replacement
Power	Power
Mute	Mute
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
TV/R	TV/R
Last	Back
Menu	Menu
Exit	Exit
Up/CH+	Up

Original	Replacement
Down/CH-	Down
Right	Right
Left	Left
OK	Ok
Vol+	Vol +
Vol-	Vol -
PG+	Ch +
PG-	Ch -
Audio	Dual
Mode	Smart
EPG	Guide
Favor	Pre Ch
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Info	Info





	Original	Replacement	Original	Replacement
	Timer	 AV		
	Sub-T	 AD SUBT		
	Text	 REPEAT TEXT		

