

 



 



 




 


 
 









 












 




 

 

 

 




 


 



 

 






Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 Mute	 Mute	 Vol-	 Vol -
 Sleep	 Sleep	 Left	 Left
 Nicam/A2	 Dual	 Enter	 Ok
 Still	 Pause	 1	 1
 16:9	 Format	 2	 2
 NR.	 Options	 3	 3
 Surround	 List	 4	 4
 Picture	 SHIFT +  Picture Format	 5	 5
 Tv/Av	 AV	 6	 6
 Display	 Info	 7	 7
 Sound	 SHIFT +  Sound Dual	 8	 8
 Up	 Up	 9	 9
 CH+	 Ch +	 0	 0
 CH-	 Ch -	 -/--	 Guide
 Down	 Down	 Recall	 Pre Ch
 Right	 Right	 Red	 Red





Original	Replacement
Green	Green
Yellow	Yellow
Cyan	Blue
Index	D. Menu
Cancel	Exit
Subpage	Subt
Size	Eject
Hold	Stop
Reveal	Menu
PIP Window	Shift + Media
PIP Position	Shift + Smart
PIP Swap	Smart
TXT/CC	Text
PIP Size	Media
PIP On/Off	Shift + Power

Original	Replacement

