


Original	Replacement	Original	Replacement
	TV Direct		Smart / List
	Power DVD		Red / Netflix / Search
	Power VCR		Green / APP / Repeat
	Power Audio		Power
	Power STB		Yellow / YouTube / Repeat
	Power TV		Blue / Prime Video / Random
	DVD		2
	VCR		4
	TV		1
	FM/AM		6
	Tv/Video		5
	Muting		Mute / Dimmer
	Channel+		CH+ / Page+
	Volume+		Vol+
	Channel-		CH- / Page-
	Volume-		Vol-
	Display/On		Display / Media
	Dimmer		Shift + Mute / Dimmer
	Sleep		Sleep / Timer
	Analog/Digital Input		AV / Input / RDS
	Smart S Setup		Setup / OPT /
	Bass Boost		Audio / Lang I/II
	C. Tone		Subtitle / EQ
	A. Position		D.Menu / Top
	Test Tone		Text / Goto
	Effect		Info / Angle
	Decode		TV/Radio /
	Surround		Eject / Surround
	Subwfr+		Right
	Center+		Up
	Surr L+		Shift + Vol+
	Surr R+		Shift + CH+ /
	Subwfr-		Left
	Center-		Down

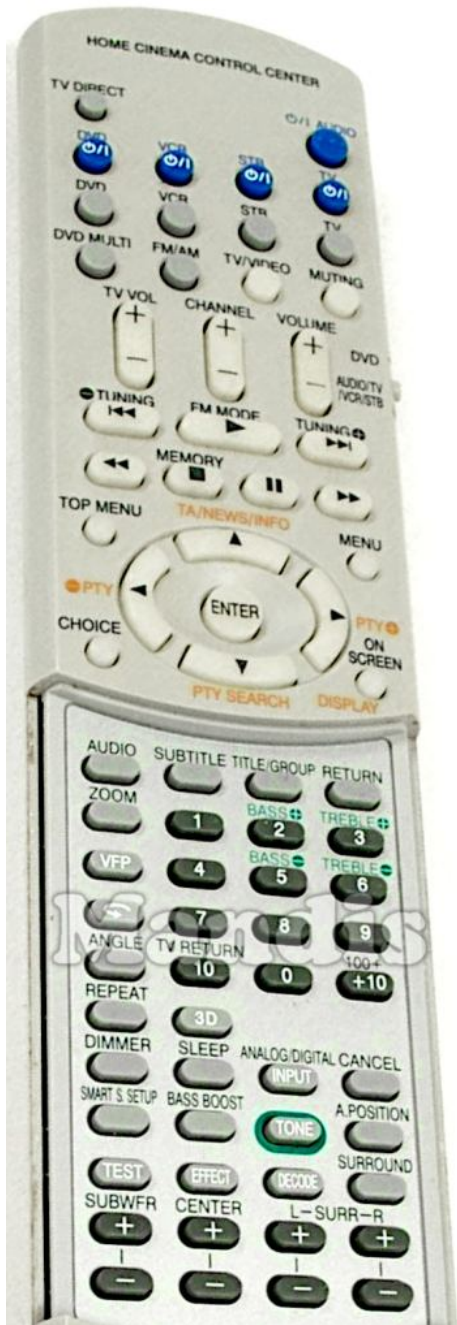


Screen



Original	Replacement
	+ Shift + Vol-
	+ Shift + CH- /

Original	Replacement



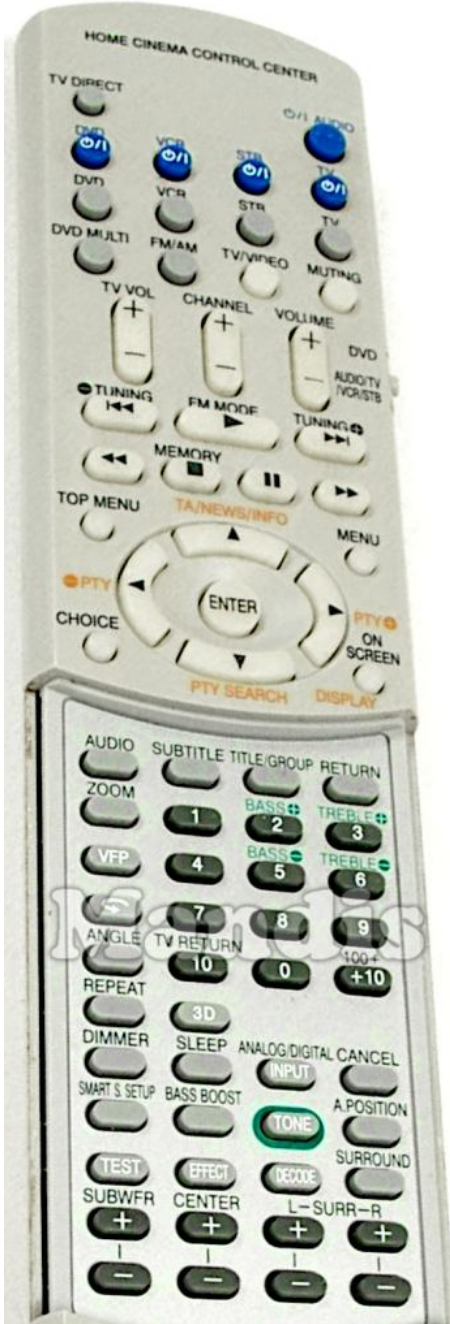


Original	Replacement
Power Audio	Power
Power Tv	+ Shift + Power
FM/AM	Eject / Surround
Tv Vol+	Vol+
Channel+ TV	CH+ / Page+
Tv Vol-	Vol-
Channel- TV	CH- / Page-
Tuning- FM/AM	<< / Tune-
FM Mode FM/AM	Smart / List
Tuning+ FM/AM	>> / Tune+
Memory FM/AM	Menu / Home
TA/News/Info	Info / Angle
TA/News/Info	Up
PTY- FM/AM	Left
PTY+ FM/AM	Right
PTY Search	Down
PTY Search	Red / Netflix / Search

Original	Replacement
Display FM/AM	Display / Media
1 FM/AM	+ Shift + 1
1 TV	1
2 FM/AM	+ Shift + 2
2 TV	2
3 FM/AM	+ Shift + 3
3 TV	3
4 FM/AM	+ Shift + 4
4 TV	4
5 FM/AM	+ Shift + 5
5 TV	5
6 FM/AM	+ Shift + 6
6 TV	6
7 FM/AM	+ Shift + 7
7 TV	7
8 FM/AM	+ Shift + 8
8 TV	8




FM/AM

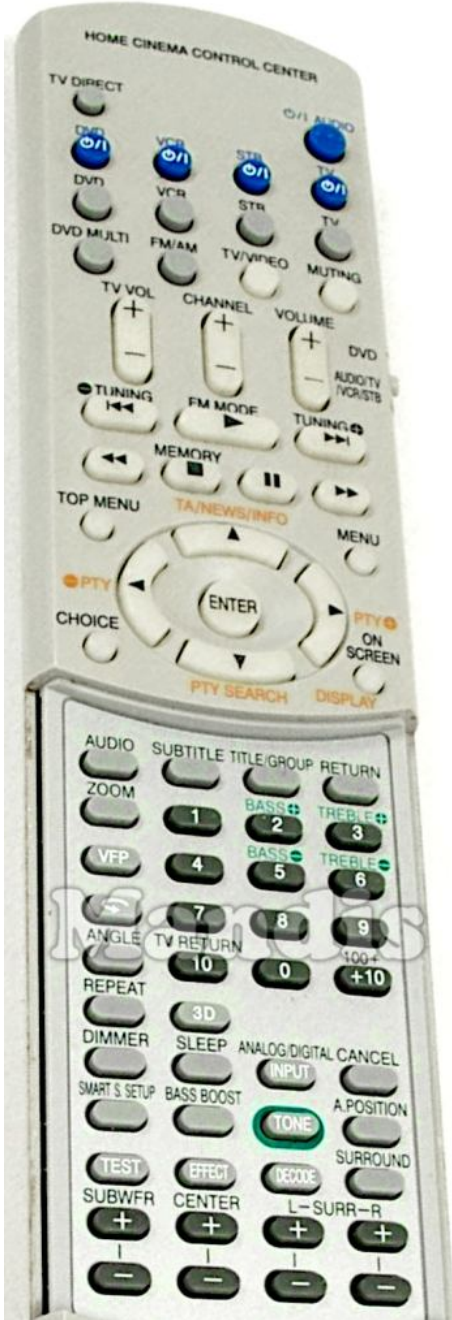

Original	Replacement	Original	Replacement
9	9 FM/AM	 +  9	Shift + 9
9	9 TV	 9	9
TV RETURN 10	10 FM/AM	 + 	Shift + Fav / Marker / PC
TV RETURN 10	10/Tv Return TV	 +  0	Shift + 0
0	0 TV	 0	0
100+ +10	+10/100+	 + 	Shift + Guide / EPG / --
100+ +10	+10 TV		Fav / Marker / PC

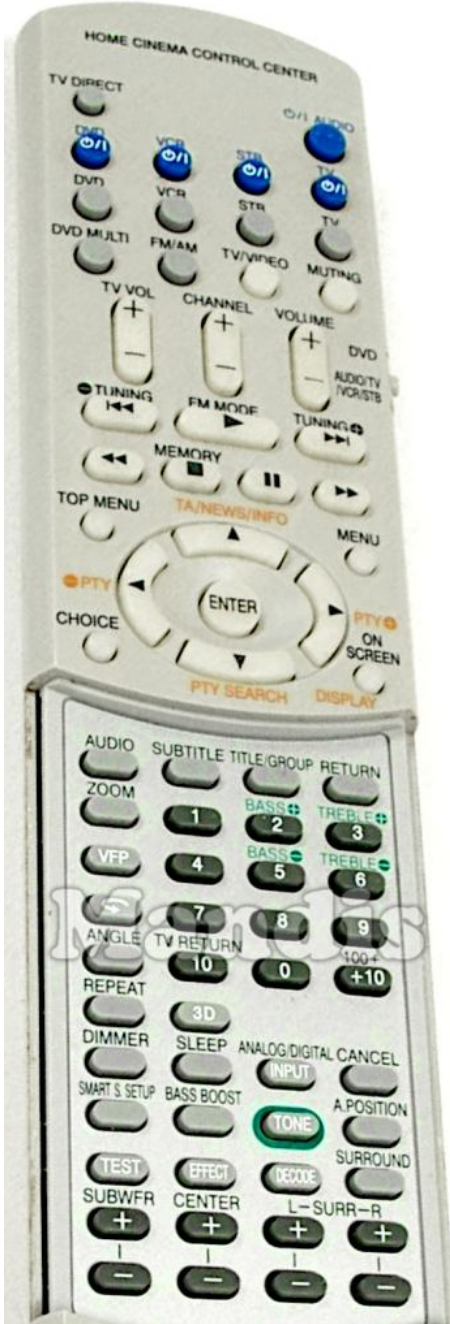



 

 



Original	Replacement
Power DVD	Power
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Top Menu	D.Menu / Top
>>	>> / Tune+
Up	Up
Menu	Menu / Home
Left	Shift + Left
Enter	OK
Right	Right
Set Up	Setup / OPT /
Down	Down
On Screen	Shift + Display / Media

Original	Replacement
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Title Group	Shift + Sound / Title
Return	Back / Return
DVD Zoom	Zoom / Size
1	1
2	2
3	3
VFP Progressive	Smart / List
4	4
5	5
6	6
←	Left
7	7
8	8
9	9
Angle	Info / Angle




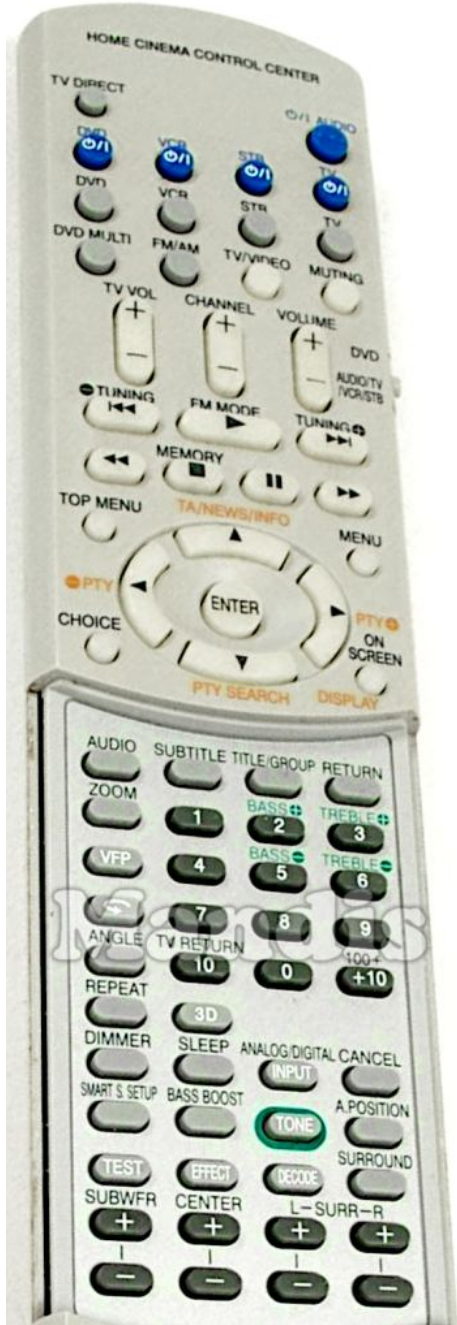







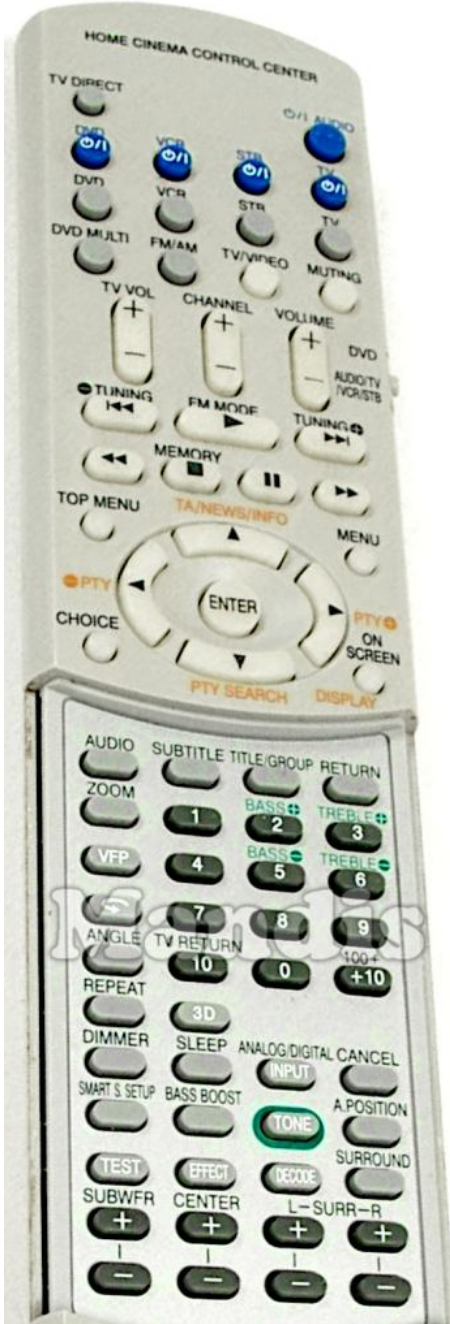



















 














Original	Replacement	Original	Replacement
	10		Guide / EPG / /-/-
	0		0
	+10		Fav / Marker / PC
	Display/Dimmer		Display / Media
	Input Analog/Digital		AV / Input / RDS
	Cancel		Exit / Cancel / Clear
	HDD Sound Effect		Sound / Title
	Surround		Eject / Surround

Original	Replacement	Original	Replacement





Original	Replacement	Original	Replacement
 Power VCR	 Shift + Power	 3 VCR	 Shift + 3
 Power STB	 Power	 3 STB	 3
 VCR	 Shift + Guide / EPG / -/-	 4 VCR	 Shift + 4
 Muting	 Mute / Dimmer	 4 STB	 4
 Channel+	 CH+ / Page+	 5 VCR	 Shift + 5
 Volume+	 Vol+	 5 STB	 5
 Channel-	 CH- / Page-	 6 VCR	 Shift + 6
 Volume-	 Vol-	 6 STB	 6
 Play VCR	 Play / Slow	 7 VCR	 Shift + 7
 << VCR	 << / Tune-	 7 STB	 7
 Stop/Memory	 Stop / Hold	 8 VCR	 Shift + 8
 Pause VCR	 Pause / Step / Freeze	 8 STB	 8
 >> VCR	 >> / Tune+	 9 VCR	 Shift + 9
 1 VCR	 Shift + 1	 9 STB	 9
 1 STB	 1	 +10 TV	 Guide / EPG / -/-
 2 VCR	 Shift + 2	 0 VCR	 Shift + 0
 2 STB	 2	 0 STB	 0

