
 


 


 

 






 

 
 



 

 




Original		Replacement		Original		Replacement	
	Power		Power		I<<		I<<
	Mute		Mute		>>I		>>I
	Red		Red		Menu		Menu
	Green		Green		FAV		Pre Ch
	Yellow		Yellow		Up / PR+		Up
	Blue		Blue		Down / PR-		Down
	Text		Text		Right / Vol+		Right
	Zoom		Eject		Left / Vol-		Left
	Subt		Subt		OK / List		Ok
	Audio		Dual		OK / List		List
	Rec		Rec		Exit		Exit
	--		Shift + Guide		EPG		Guide
	Stop		Stop		Vol+		Vol +
	Play / Pause		Play		Vol-		Vol -
	Play / Pause		Pause		Info		Info
	<<		<<		Media		Media
	>>		>>		Page+		Ch +





Original	Replacement	Original	Replacement
 Page-	 Ch -		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Recall	 Back		
 TV / Radio	 TV/R		

