 


Original	Replacement
	Power
	Mute / Dimmer
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	Rec / Rec Mode
	<< / Tune-
	>> / Tune+
	TV/Radio /
	D.Menu / Top
	Text / Goto
	AV / Input / RDS
	Menu / Home
	Up
	Left
	OK
	Right

Original	Replacement
	Exit / Cancel / Clear
	Down
	Back / Return
	Vol+
	Smart / List
	CH+ / Page+
	Vol-
	Display / Media
	CH- / Page-
	1
	2
	3
	4
	5
	6
	7
	8

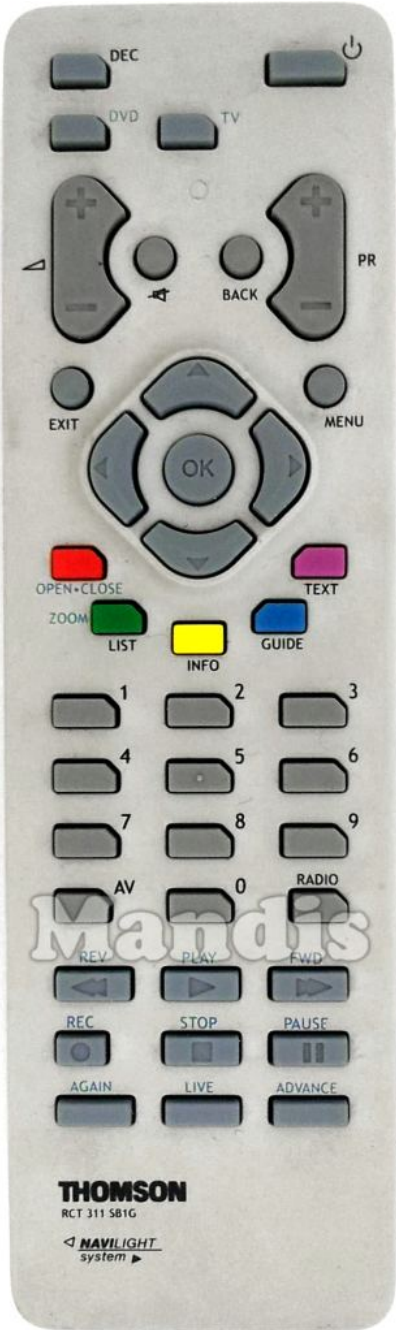 










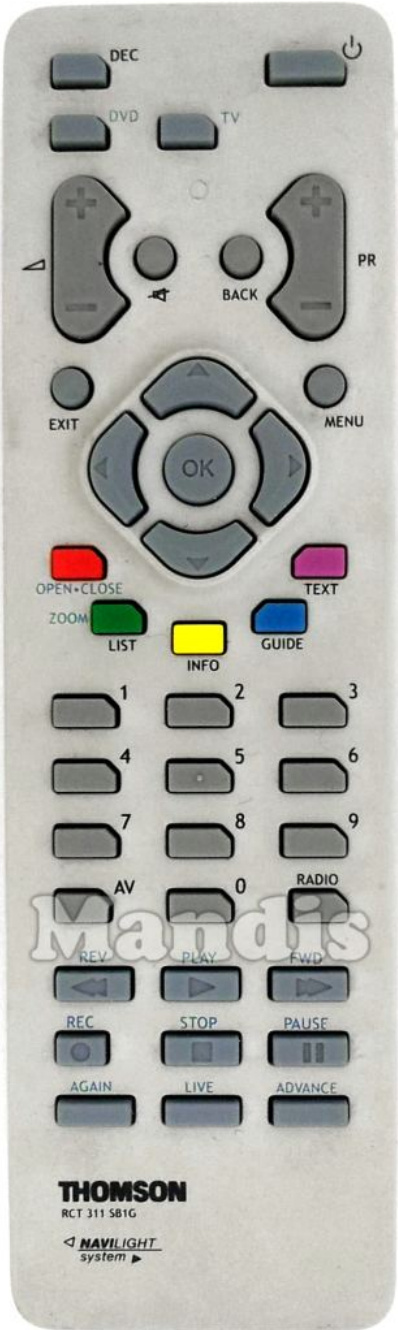

 

 

 

 

 





 











Original		Replacement	
	9		9
	0		0
OPEN-CLOSE	Red/Open/Close		Red / Netflix / Search
ZOOM LIST	Green/Zoom/Lis		Green / APP / Repeat
INFO	Yellow/Info		Yellow / YouTube / Repeat
GUIDE	Blue/Guide		Blue / Prime Video / Random
	Radio	+	Shift + TV/Radio / Program
	Again	+	Shift + Back / Return
	DVD	+	Shift + 2

Original	Replacement

 




Original	Replacement
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Rec / Rec Mode
	 << / Tune-
	 >> / Tune+
	 TV/Radio /
	 D.Menu / Top
	 Text / Goto
	 AV / Input / RDS
	 Menu / Home
	 Up
	 Left
	 OK
	 Right

Original	Replacement
	 Exit / Cancel / Clear
	 Down
	 Back / Return
	 Vol+
	 Smart / List
	 CH+ / Page+
	 Vol-
	 Display / Media
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8

 


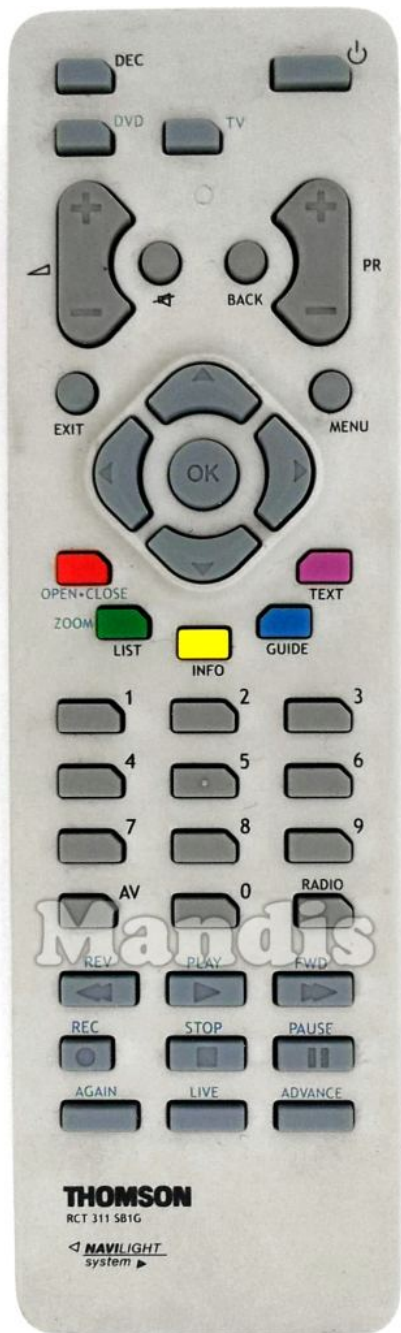







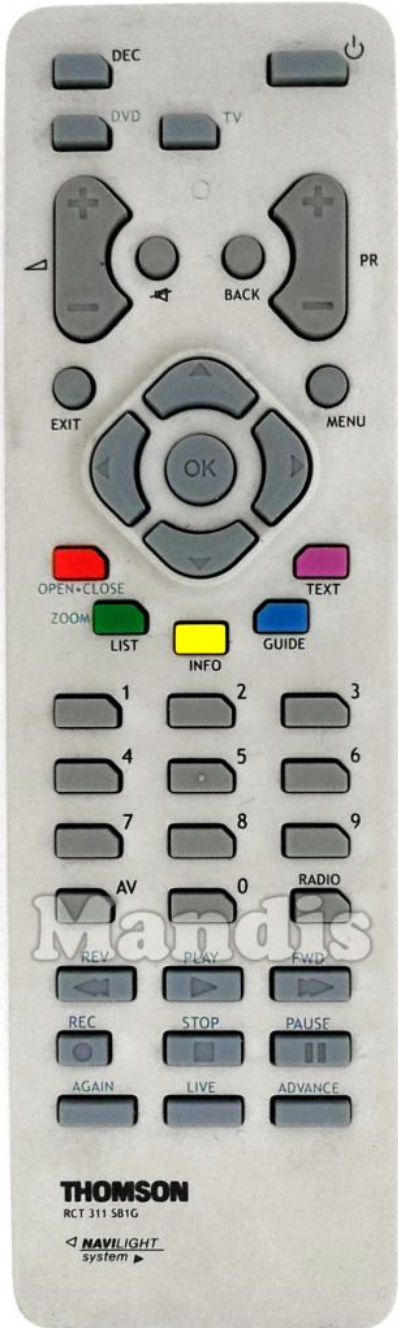 



 





 

 















Original		Replacement	
	9		9
	0		0
	Red/Open/Close		Red / Netflix / Search
	Green/Zoom/Lis		Green / APP / Repeat
	Yellow/Info		Yellow / YouTube / Repeat
	Blue/Guide		Blue / Prime Video / Random
	Radio		Shift + TV/Radio / Program
	Again		Shift + Back / Return
	DVD		Shift + 2

Original		Replacement	

 




Original	Replacement
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Rec / Rec Mode
	 << / Tune-
	 >> / Tune+
	 TV/Radio /
	 D.Menu / Top
	 Text / Goto
	 AV / Input / RDS
	 Menu / Home
	 Up
	 Left
	 OK
	 Right

Original	Replacement
	 Exit / Cancel / Clear
	 Down
	 Back / Return
	 Vol+
	 Smart / List
	 CH+ / Page+
	 Vol-
	 Display / Media
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8



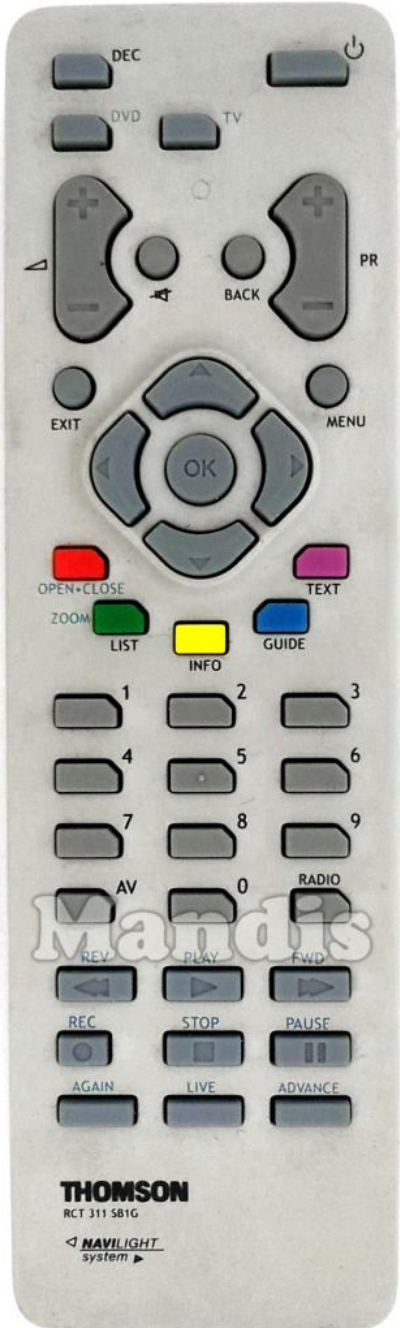

Original		Replacement	
	9		9
	0		0
Red/Open/Close		Red / Netflix / Search	
Green/Zoom/Lis		Green / APP / Repeat	
Yellow/Info		Yellow / YouTube / Repeat	
Blue/Guide		Blue / Prime Video / Random	
Radio		Shift + TV/Radio / Program	
Again		Shift + Back / Return	
DVD		Shift + 2	

Original		Replacement	

