











 












 









| Original   | Replacement   |
|--|---|
|  Power    |  Power                         |
|  Mute     |  Mute / Dimmer                 |
|  1        |  1                             |
|  2        |  2                             |
|  3        |  3                             |
|  4        |  4                             |
|  5        |  5                             |
|  6        |  6                             |
|  7        |  7                             |
|  8       |  8                            |
|  9      |  9                           |
|  -/--   |  Shift + Guide / EPG / -/-- |
|  0      |  0                           |
|  Recall |  Back / Return               |
|  P.Mode |  Picture / Format            |
|  S.Mode |  Sound / Title               |
|  FAV    |  Fav / Marker / PC           |

| Original  | Replacement   |
|---|---|
|  Vol+      |  Vol+              |
|  MTS I/II  |  Audio / Lang I/II |
|  CH+       |  CH+ / Page+       |
|  Vol-      |  Vol-              |
|  Sub-T     |  Subtitle / EQ     |
|  CH-       |  CH- / Page-       |
|  SET       |  Smart / List      |
|  Home      |  D.Menu / Top      |
|  Mouse     |  Info / Angle      |
|  Source   |  AV / Input / RDS |
|  Up      |  Up              |
|  Display |  Display / Media |
|  Left    |  Left            |
|  OK      |  OK              |
|  Right   |  Right           |
|  Menu    |  Menu / Home     |
|  Down    |  Down            |



