





 




 


 
 

 

 




 



 

 

 
 


 



 









Original	Replacement	Original	Replacement
 Power	 Power	 OK	 Shift + Ok
 Mute	 Mute	 Right	 Right
 1	 1	 Down	 Down
 2	 2	 Vol+	 Vol +
 3	 3	 Vol-	 Vol -
 4	 4	 CH+	 Ch +
 5	 5	 CH-	 Ch -
 6	 6	 Page-	 Shift + Ch -
 7	 7	 Page+	 Shift + Ch +
 8	 8	 FAV	 Pre Ch
 9	 9	 Guide	 Guide
 0	 0	 i	 Info
 Menu	 Menu	 NTSC / PAL	 Smart
 Exit	 Exit	 Pause	 Pause
 Up	 Up	 Audio	 Dual
 Left	 Left	 Radio	 TV/R
 OK	 Ok	 Audio LR	 Options





Original	Replacement	Original	Replacement
 Red / F1	 Red		
 Green / F2	 Green		
 Yellow / F3	 Yellow		
 Blue / F4	 Blue		
 Last	 Back		
 Text	 Text		

