



Original		Replacement		Original		Replacement	
	Power		Power		Menu		Menu
	Mute		Mute		TV / AV		AV
	1		1		Sleep		Sleep
	2		2		Up / PR+		Up
	3		3		Up / PR+		Ch +
	4		4		Down / PR-		Down
	5		5		Down / PR-		Ch -
	6		6		Right / Vol+		Right
	7		7		Right / Vol+		Vol +
	8		8		Left / Vol-		Left
	9		9		Left / Vol-		Vol -
	0		0		OK		Ok
	*		Guide		Text / Mix		Text
	*		Pre Ch		Q.View		Options
	PSM		Format		List		List
	SSM		Shift + Dual		Red		Red
	I/II		Dual		Green		Green





Original	Replacement	Original	Replacement
 Yellow	 Yellow		
 Blue	 Blue		
 Update	 Subt		
 Time	 Eject		
 Reveal	 TV/R		
 Hold	 Stop		
 PIP/*	 3D		
 ARC	 Smart		
 TV / PC	 Back		
 Position/*	 Media		
 Swap/*	 Shift + Media		
 Input/*	 Shift + AV		
 Mode/*	 Shift + 3D		
 PR+/*	 Shift + Ch +		
 PR-/*	 Shift + Ch -		

Original	Replacement

