



Original	Replacement
 Power	 Power
 OPC	 Smart
 Sleep	 Sleep
 Select	 Shift + Ok
 [i+]	 Info
 [[<>]]	 Format
 AV Mode	 Shift + AV
 [Mute]	 Options
 [FF]	 Shift + Options
 Card	 Media
 REC Stop	 Rec
 3D-Y/C	 Shift + 3
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5

Original	Replacement
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Pre Ch
 DTV	 TV/R
 [...]	 Subt
 [≡?]	 3D
 [≡i]	 Shift + Info
 [≡]	 Text
 Sound	 Dual
 Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -





Original	Replacement	Original	Replacement
	 Input		
	 DTV Menu		
	 Menu		
	 Guide		
	 List		
	 Up		
	 Left		
	 Right		
	 OK		
	 Down		
	 Exit		
	 Return		
	 Red		
	 Green		
	 Yellow		
	 Blue		

